

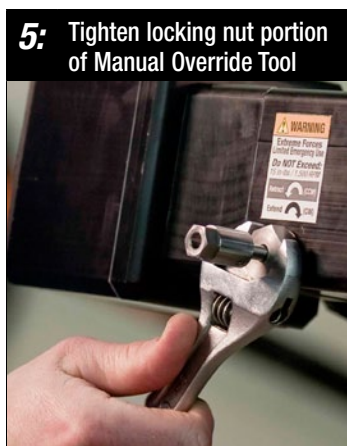


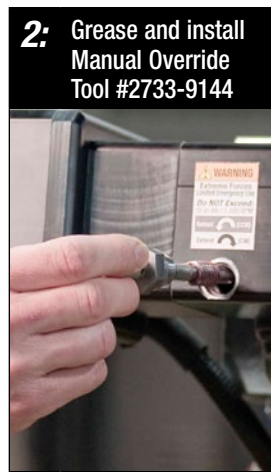

GSWA201 Manual Override

- ⚠ WARNING** Disable servo motor OR disconnect motor power before beginning
- ⚠ WARNING** Extending or retracting to the mechanical "hard stops" may damage the actuator

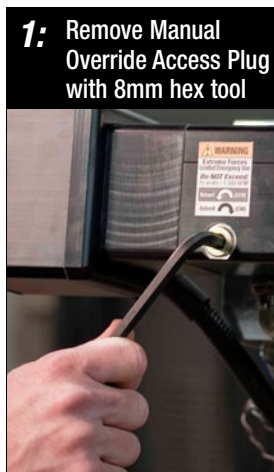

⚠ WARNING Set drill to low torque setting to prevent excessive torque from damaging Manual Override Tool or the GSWA

Clockwise (CW) = Extend
Counterclockwise (CCW) = Retract

⚠ WARNING Do not exceed 15 in-lbs (1.7 N-m) torque
Do not exceed 1500 RPM



⚠ WARNING Manual Override Tool must be removed and Manual Override Access Plug replaced before powering GSWA

Follow the instructions in reverse to restore GSWA to service