

# **MXP BAND CYLINDER**



The MXP pneumatic rodless cylinder is exactly what you expect from the industry's number one rodless supplier. Designed with our exclusive ENDURANCE TECHNOLOGY<sup>SM</sup> features, the MXP delivers superior performance to meet the most demanding applications. Nobody knows rodless like Tolomatic, and the MXP proves it.

- DURABLE BEARINGS. Three bearing choices to match your application needs. Profiled rail design reduces friction and extends actuator life. Solid bearing design reduces stress concentration for optimum performance. Internal bearing design is permanently lubricated for long, trouble-free service.
- DURABLE BANDS. Stainless steel bands are stronger and will not elongate like elastomer (non-metallic) bands, providing reliable sealing over the life of the actuator.



## N-INTERNAL BEARING

- Low cost solution for applications with limited load and bending moment requirements
- Lowest breakaway pressure
- Best in many vertical applications
- Permanently lubed internal bearing

## S-SOLID BEARING

- Increased Mx moment capacity
- Large bearing surface contact area optimizes stress distribution on bearing for long service life
- Large carrier mounting pattern for more load stability and compatibility with existing BC2 applications
- Engineered bearing material does not require additional lubrication
- Solid bearings are field replaceable

## P-PROFILED RAIL


- Recirculating ball bearing design offers reduced friction for reliable service life
- High load and bending moment capacities
- Low profile to fit your application
- High precision bearings feature smooth, low breakaway motion

## **SELECT THE PERFORMANCE YOU NEED**

Choose from: • Three Bearing Models • Six Bore Sizes • Built to Your Specified Stroke Length!

### **MOMENT & LOAD CAPACITY COMPARISON**

Graph for model comparison, data from MXP40, 38mm (1.5") bore

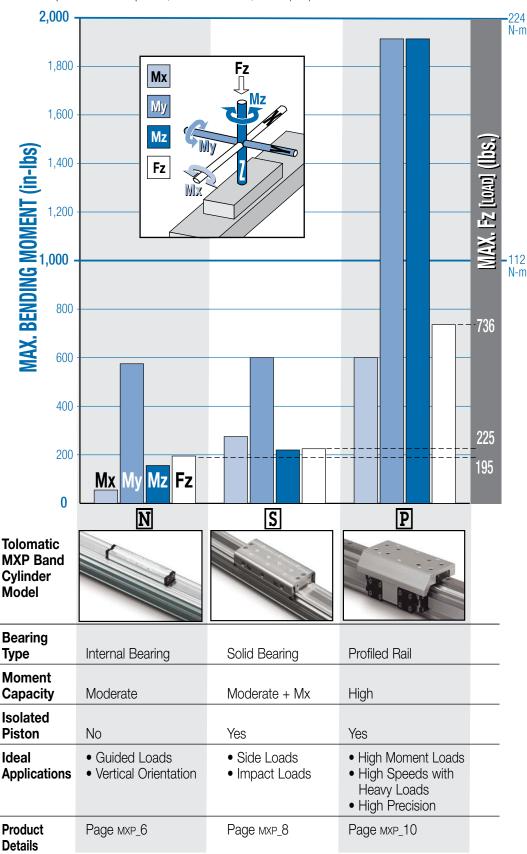

ABT BT

# **N** INTERNAL BEARING

# ENDURANCE TECHNOLOGY SM A Tolomatic Design Principle

### **STAINLESS STEEL BANDS**

- Both interior sealing band and exterior dust band made of fatigue resistant stainless steel
- Does not stretch like bands made of rubber or polymer materials
- Stainless steel sealing bands resist blow out during pressure spikes that may occur during high velocity cushioning



### **INTERNAL BEARINGS**



- Design maximizes piston bearing surface area for less pressure on bearing surfaces, less pressure results in less wear
- · Permanent lubrication for low friction and extended bearing life
- Internal location provides protection from external contaminants, extending life

### **RETAINED DUST BAND**

Retained dust band keeps contaminants from entering the cylinder interior, protecting components for reduced maintenance and increased uptime

### **POSITIVE POSITION SEALS**

- •Sturdy U-cup base section assures positive positioning of seal lip for better sealing and less wear
- · Made of custom formulated polyurethane for pliable, wear resistant seal lip



### **DIRECT MOUNT**

Head bolts are tapped for direct mounting

### **INCH OR METRIC MOUNTING**

Your choice of inch (US standard) or metric fasteners for carrier and head bolt mounting

## **PORTING CHOICES**

- 4-ported heads are standard to allow air connections on sides, end or bottom
- · Single-end porting allows convenient one end air connection
- NPT, Metric Parallel (ISO-G/BSP) & Metric Taper (Rc/ BST) available on both metric and inch (US standard) mount actuators

### **ADJUSTABLE CUSHIONS**

- Easy screw adjustment for smooth deceleration protecting actuator from high stress at end-of-stroke
- Adjustable cushions with retained stainless steel needle screw for increased safety

NOTE: Boxed letters indicate ordering codes

### **OPTIONS**

## **AUXILIARY CARRIER DW**• 2X higher Fz (load) capacity

- · High bending moment capacity



### FLOATING MOUNT |F||L|

• Compensates for non-parallelism between MXP band cylinder and externally guided load



### TUBE CLAMPS TC

- Used for intermediate support
- Flush with bottom of actuator to retain low profile
- Drop-in, adjustable mounting locations



## FOOT MOUNTS FM • For end mounting of MXP band cylinder

- Use to bottom or side mount actuator



## SHOCK ABSORBERS AL SL

- Allows increased operating speed and load
- Self-compensates for load or speed changes
- Minimizes impact load to equipment
- Fixed or adjustable position shocks



### SINGLE-END PORTING |S|

 Convenient single-end air connection (not available on MXP16)



### **SWITCHES**

- Wide variety of sensing choices: Reed, Solid State PNP or NPN, all available normally open or normally closed
- Flush mount, drop-in installation, anytime
- Bright LEDs, power & signal indication

### **INTERNAL MAGNETS**

DUST BAND

SEALING BAND

MAGNET

Standard feature that allows sensor installation on left, right or bottom of the extrusion



**DUST WIPER** 

Formed end cap and


side dust wipers keep contaminants from

entering the cylinder's internal area

25mm PISTON BRACKET MINIMUM CROSS-SECTIONAL AREA (mm²)

durability

**HIGH STRENGTH PISTON** 

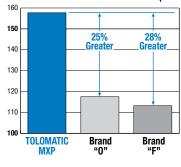



• CE rated, RoHS compliant

# S SOLID BEARING

## **ENDURANCE TECHNOLOGY**

A Tolomatic Design Principle

Endurance Technology features are designed for maximum durability to provide extended service life.

### **STAINLESS STEEL BANDS**

- Both interior sealing band and exterior dust band made of fatigue resistant stainless steel
- Does not stretch like bands made of rubber or polymer materials
- Stainless steel sealing bands resist blow out during pressure spikes that may occur during high velocity cushioning



### **POSITIVE POSITION SEALS**

- Sturdy U-cup base section assures positive positioning of seal lip for better sealing and less wear
- Made of custom formulated polyurethane for pliable, wear resistant seal lip




## **INTERNAL MAGNETS**

Standard feature that allows sensor installation on left, right or bottom of the extrusion

### **RETAINED DUST BAND**

Retained dust band keeps contaminants from entering the cylinder interior, protecting components for reduced maintenance and increased uptime

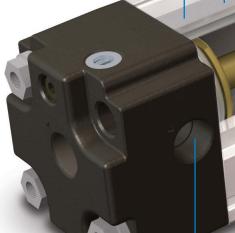


### **PORTING CHOICES**

- 4-ported heads are standard to allow air connections on sides, end or bottom
- Single-end porting allows convenient one end air connection
- NPT, Metric Parallel (ISO-G/BSP) & Metric Taper (Rc/ BST) available on both metric and inch (US standard) mount actuators

### **ISOLATED PISTON**

- Unique design isolates the piston from the applied load, extending the service life of the piston seals
- Piston remains isolated even when the carrier is deflected under load
- Piston bracket and carrier feature single piece extrusions, reducing failure points

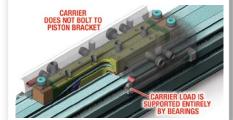

### **DIRECT MOUNT**

Head bolts are tapped for direct mounting

## INCH OR METRIC MOUNTING

Your choice of inch (US standard) or metric fasteners for carrier and head bolt mounting




S

## Tolomatic ... MAXIMUM DURABILITY

### **ADJUSTABLE CUSHIONS**

- · Easy screw adjustment for smooth deceleration protecting actuator from high stress at end-of-stroke
- Adjustable cushions with retained stainless steel needle screw for increased safety

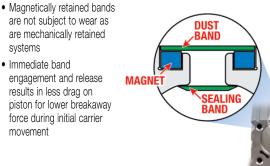

**NON-WEAR BAND RETENTION** 

NOTE: Boxed letters indicate ordering codes

### **LARGE FLEXIBLE MOUNTING PATTERN**

- · Carrier gives more load stability
- · Compatibility with existing BC2 applications

· More fastening options

### **NON-BINDING BEARING ARMS**

Bearings are tensioned indirectly, providing bind free adjustment


**DUST WIPER** 

contaminants from entering

the cylinder's internal area


Formed end cap and

side dust wipers keep



### TRAPEZOIDAL BEARINGS

- Trapezoidal design maximizes bearing surface area for less pressure on bearing surfaces; less pressure results in less wear
- · Engineered bearing material has low static and dynamic friction with low wear properties for long lasting, smooth operation
- · Bearings are field replaceable for extended service life

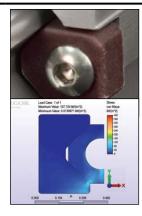

### **OPTIONS**



## • 2X higher Fz (load) capacity

- · High bending moment capacity



### FLOATING MOUNT |F||L|

Compensates for non-parallelism between MXP band cylinder and externally guided load



### TUBE CLAMPS TIC

- Used for intermediate support • Flush with bottom of actuator to retain low profile
- Drop-in, adjustable mounting locations



## FOOT MOUNTS FM • For end mounting of MXP band cylinder

- Use to bottom or side mount actuator



## SHOCK ABSORBERS AL SL

- Allows increased operating speed and load
- Self-compensates for load or speed changes
- Minimizes impact load to equipment
- Fixed or adjustable position shocks



### SINGLE-END PORTING |S|

• Convenient single-end air connection (not available on MXP16)



### **SWITCHES**

- Wide variety of sensing choices: Reed, Solid State PNP or NPN, all available normally open or normally closed
- Flush mount, drop-in installation, anytime
- Bright LEDs, power & signal indication
- CE rated, RoHS compliant



# P PROFILED RAIL ENDURANCE TECHNOLOGY

A Tolomatic Design Principle


Endurance Technology features are designed for maximum durability to provide extended service life.

### **RECIRCULATING BALL BEARINGS**

- •Recirculating ball bearings are used to reduce friction and extend actuator life
- Ball bearings with a grease pocket between ball elements, reduces friction, noise and maintenance
- Large permissible moment loads
- · Low profile recirculating ball bearings
- High speed operation, low heat generation
- High precision, smooth, low friction motion



Grease pocket



### **INTERNAL MAGNETS**

Standard feature that allows sensor installation on left, right or bottom of the extrusion

## **DIRECT MOUNT**

Head bolts are tapped for direct mounting

### **PORTING CHOICES**

- 4-ported heads are standard to allow air connections on
- Single-end porting allows convenient one end air connection
- BSP) & Metric Taper (Rc/BST) available on both metric and inch (US standard) mount actuators

- Both interior sealing band and exterior dust band made of fatigue resistant stainless steel
- · Does not stretch like bands made of rubber or polymer materials
- Stainless steel sealing bands resist blow out during pressure spikes that may occur during high velocity cushioning



### **POSITIVE POSITION SEALS**

- Sturdy U-cup base section assures positive positioning of seal lip for better sealing and less wear
- Made of custom formulated polyurethane for pliable, wear resistant seal lip



- sides, end or bottom
- NPT, Metric Parallel (ISO-G/

### **STAINLESS STEEL BANDS**

**INCH OR METRIC** 

**MOUNTING** 

Your choice of inch (US standard)

or metric fasteners for carrier and

head bolt mounting

### **LOW CARRIER HEIGHT**

• Reduces overall cylinder envelope

**DUST WIPER** 

Formed end cap and

side dust wipers keep

contaminants from entering the cylinder's internal area


· Large mounting pattern for high load stability

### **ADJUSTABLE CUSHIONS**

- · Easy screw adjustment for smooth deceleration protecting actuator from high stress at end-of-stroke
- · Adjustable cushions with retained stainless steel needle screw for increased safety



- · Magnetically retained bands are not subject to wear as are mechanically retained systems
- · Immediate band engagement and release results in less drag on piston for lower breakaway force during initial carrier movement

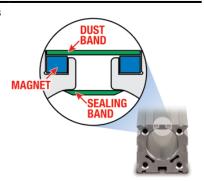


NOTE: Boxed letters indicate ordering codes

### **RETAINED DUST BAND** Retained dust band

keeps contaminants from entering the cylinder interior, protecting components for reduced maintenance and increased uptime

### **ISOLATED PISTON**


- Unique design isolates the piston from the applied load, extending the service life of the piston seals
- Piston remains isolated even when the carrier is deflected under load
- Piston bracket and carrier feature single piece extrusions, reducing failure points

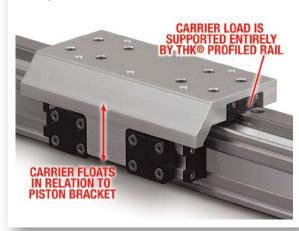

### **OPTIONS**



## **AUXILIARY CARRIER DW**• 2X higher Fz (load) capacity



· High bending moment capacity

### TUBE CLAMPS TIC

- Used for intermediate support
- Flush with bottom of actuator to retain low profile
- Drop-in, adjustable mounting locations



## 

- Use to bottom or side mount actuator



## SHOCK ABSORBERS ALISIL

- Allows increased operating speed and load
- Self-compensates for load or speed changes
- Minimizes impact load to equipment
- Fixed or adjustable position shocks



### SINGLE-END PORTING S

• Convenient single-end air connection (not available on MXP16)




### **SWITCHES**

- Wide variety of sensing choices: Reed, Solid State PNP or NPN, all available normally open or normally closed
- Flush mount, drop-in installation, anytime
- Bright LEDs, power & signal indication
- CE rated, RoHS compliant

### **STANDARD**



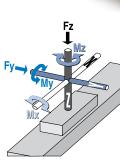

			MAXIMU	M BENDING M	OMENTS	MAX. LOAD	THRUST
BORE			Mx	Му	Mz	Fz	(at 100 PSI)
ПZ	Inch	0.63 in	3 in-lbs	35 in-lbs	5 in-lbs	30 lbf	30.7 lbf
16	Metric	16 mm	0.3 N-m	4.0 N-m	0.6 N-m	133 N	136 N
امالتا	Inch	1.00 in	9 in-lbs	132 in-lbs	27 in-lbs	65 lbf	78.5 lbf
25	Metric	25 mm	1.0 N-m	14.9 N-m	3.1 N-m	289 N	349 N
מוס	Inch	1.25 in	36 in-lbs	318 in-lbs	120 in-lbs	115 lbf	123 lbf
32	Metric	32 mm	4.1 N-m	35.9 N-m	13.6 N-m	512 N	546 N
ПП	Inch	1.50 in	55 in-lbs	575 in-lbs	156 in-lbs	195 lbf	177 lbf
40	Metric	38 mm	6.2 N-m	65 N-m	17.6 N-m	867 N	786 N
	Inch	2.00 in	98 in-lbs	1,017 in-lbs	172 in-lbs	270 lbf	314 lbf
50	Metric	50 mm	11.1 N-m	115 N-m	19.4 N-m	1,201 N	1,397 N
	Inch	2.50 in	120 in-lbs	1,776 in-lbs	216 in-lbs	370 lbf	491 lbf
63	Metric	64 mm	13.6 N-m	201 N-m	24.4 N-m	1,646 N	2,184 N

Ratings are the maximum values for shock-free, vibration-free operation in a typical industrial environment. Contact Tolomatic for assistance in selecting the most appropriate actuator for your application.

The moment and load capacity of the actuator's bearing system is based on an L10 life of 200,000,000 linear inches of travel. Life of the actuator will vary for each application depending on the combined loads, motion parameters and operating conditions. The load factor (L<sub>F</sub>) ratios for each application must not exceed a value of 1 (as calculated below). Exceeding



a load factor of 1 will diminish the

actuator's rated life.

With combined loads, L<sub>F</sub> must not exceed the value 1.







\*At minimum "D" distance between carriers see graph below for other distances

With combined loads, LF must not exceed the value 1.


$$L_F = \frac{Mx}{Mx_{max}} + \frac{My}{My_{max}} + \frac{Mz}{Mz_{max}} + \frac{Fy}{Fy_{max}} + \frac{Fz}{Fz_{max}} \le 1$$

A

Ratings are the maximum values for shock-free, vibration-free operation in a typical industrial environment.


Contact Tolomatic for assistance in selecting the most appropriate actuator for your application.

Mya & Mza vs. DISTANCE

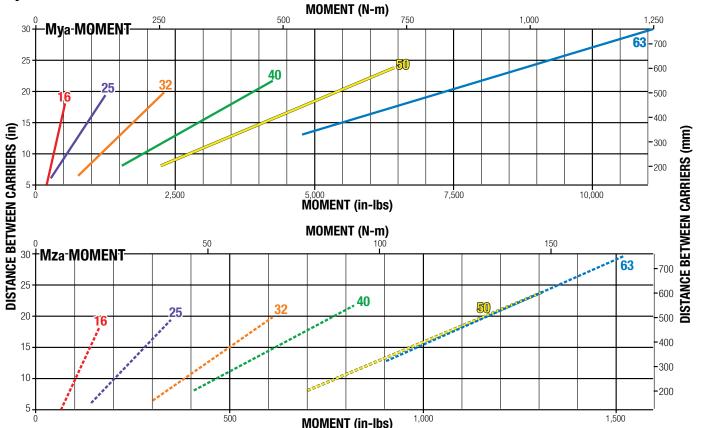

Ratings were calculated with the following conditions:

- 1.) Coupling between carriers is rigid.
- 2.) Load is equally distributed between carriers.
- 3.) Coupling device applies no misaligned loads to carriers.

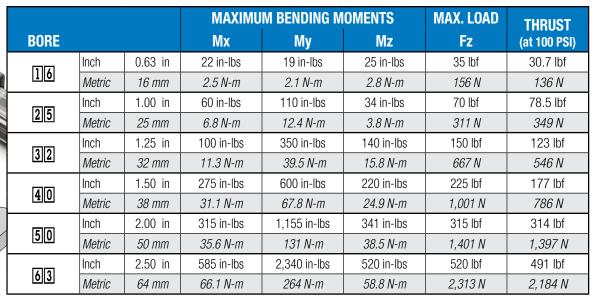



The moment and load capacity of the actuator's bearing system is based on an L10 life of 200,000,000 linear inches of travel. Life of the actuator will vary for each application depending on the combined loads, motion parameters and operating conditions. The load factor (L<sub>F</sub>) ratios for each application must not exceed a value of 1 (as calculated below). Exceeding a load factor of 1 will diminish the actuator's rated life.

$$L_F = \frac{Mx}{Mx_{max}} + \frac{My}{My_{max}} + \frac{Mz}{Mz_{max}} + \frac{Fy}{Fy_{max}} + \frac{Fz}{Fz_{max}} \le 1$$

With combined loads, Lr must not exceed the value 1.



Ratings are the maximum values for shock-free, vibration-free operation in a typical industrial environment. Contact Tolomatic for assistance in selecting the most appropriate actuator for your application.







			"D"	MAXIMUN	I BENDING N	IOMENTS*	MAX. LOAD	THRUST
BORE			MIN	Mxa	MyA	Mza	Fza	(at 100 PSI)
ПД	Inch	0.63 in	5.0 in	44 in-lbs	175 in-lbs	175 in-lbs	70 lbf	30.7 lbf
16	Metric	16 mm	127 mm	5.0 N-m	19.8 N-m	19.8 N-m	311 N	136 N
	Inch	1.00 in	6.0 in	120 in-lbs	420 in-lbs	420 in-lbs	140 lbf	78.5 lbf
25	Metric	25 mm	152 mm	13.6 N-m	47.5 N-m	47.5 N-m	623 N	349 N
האם	Inch	1.25 in	7.0 in	200 in-lbs	1,050 in-lbs	1,050 in-lbs	300 lbf	123 lbf
32	Metric	32 mm	178 mm	22.6 N-m	119 N-m	119 N-m	1,334 N	546 N
	Inch	1.50 in	8.5 in	550 in-lbs	1,913 in-lbs	1,913 in-lbs	450 lbf	177 lbf
40	Metric	38 mm	216 mm	62.1 N-m	216 N-m	216 N-m	2,002 N	786 N
EA	Inch	2.00 in	8.6 in	630 in-lbs	2,709 in-lbs	2,709 in-lbs	630 lbf	314 lbf
50	Metric	50 mm	218 mm	71.2 N-m	306 N-m	306 N-m	2,802 N	1,397 N
40	Inch	2.50 in	13.0 in	1,170 in-lbs	6,760 in-lbs	6,760 in-lbs	1,040 lbf	491 lbf
63	Metric	64 mm	330 mm	132 N-m	764 N-m	764 N-m	4,626 N	2,184 N

\*At minimum "D" distance between carriers see graph below for other distances

With combined loads,  $L_F$  must not exceed the value 1.


$$L_F = \frac{Mx}{Mx_{max}} + \frac{My}{My_{max}} + \frac{Mz}{Mz_{max}} + \frac{Fy}{Fy_{max}} + \frac{Fz}{Fz_{max}} \le 1$$

A

Ratings are the maximum values for shock-free, vibration-free operation in a typical industrial environment.

Contact Tolomatic for assistance in selecting the most appropriate actuator for your application.

Mya & Mza vs. DISTANCE

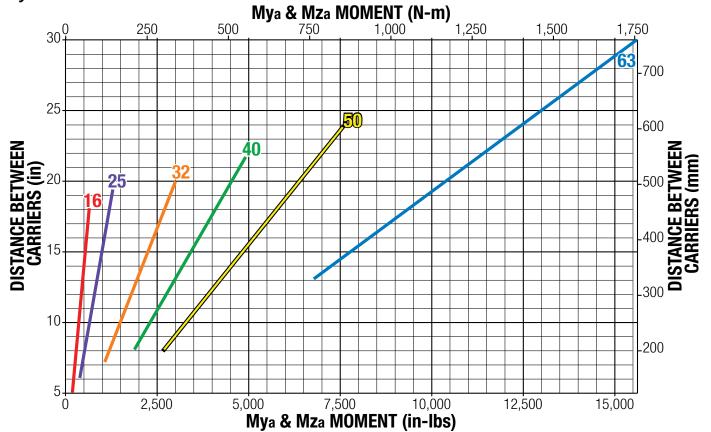


Ratings were calculated with the following conditions:

- 1.) Coupling between carriers is rigid.
- 2.) Load is equally distributed between carriers.
- 3.) Coupling device applies no misaligned loads to carriers.

### **STANDARD**



			MAXIMUI	M BENDING N	<b>NOMENTS</b>	MAX.	LOAD	THRUST
BORE			Mx	My	Mz	Fy	Fz	(at 100 PSI)
חבו	Inch	0.63 in	39 in-lbs	339 in-lbs	339 in-lbs	217 lbf	217 lbf	30.7 lbf
16	Metric	16 mm	4.5 N-m	38.3 N-m	38.3 N-m	966 N	966 N	136 N
	Inch	1.00 in	126 in-lbs	502 in-lbs	377 in-lbs	449 lbf	449 lbf	78.5 lbf
25	Metric	25 mm	14.3 N-m	56.7 N-m	42.6 N-m	1,996 N	1,996 N	349 N
וסוסו	Inch	1.25 in	226 in-lbs	1,344 in-lbs	1,344 in-lbs	569 lbf	569 lbf	123 lbf
32	Metric	32 mm	25.6 N-m	152 N-m	152 N-m	2,531 N	2,531 N	546 N
	Inch	1.50 in	600 in-lbs	1,913 in-lbs	1,913 in-lbs	736 lbf	736 lbf	177 lbf
40	Metric	38 mm	67.8 N-m	216 N-m	216 N-m	3,274 N	3,274 N	786 N
	Inch	2.00 in	811 in-lbs	3,483 in-lbs	3,483 in-lbs	1,014 lbf	1,014 lbf	314 lbf
50	Metric	50 mm	91.7 N-m	394 N-m	394 N-m	4,510 N	4,510 N	1,397 N
	Inch	2.50 in	1,019 in-lbs	5,339 in-lbs	5,339 in-lbs	1,292 lbf	1,292 lbf	491 lbf
63	Metric	64 mm	115 N-m	603 N-m	603 N-m	5,745 N	5,745 N	2,184 N

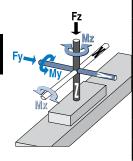

A

NOTE: Mating surface of component mounted to carrier must maintain a flatness of at least 0.0015" (0.040 mm)



Ratings are the maximum values for shock-free, vibration-free operation in a typical industrial environment.

Contact Tolomatic for assistance in selecting the most appropriate actuator for your application.



tolomatic.com/CAD

**Download 3D CAD** Always use CAD solid model to determine critical dimensions






The moment and load capacity of the actuator's bearing system is based on an L10 life of 200,000,000 linear inches of travel. Life of the actuator will vary for each application depending on the combined loads, motion parameters and operating conditions. The load factor (L<sub>F</sub>) ratios for each application must not exceed a value of 1 (as calculated below). Exceeding a load factor of 1 will diminish the actuator's rated life.

$$L_F = \frac{Mx}{Mx_{max}} + \frac{My}{My_{max}} + \frac{Mz}{Mz_{max}} + \frac{Fy}{Fy_{max}} + \frac{Fz}{Fz_{max}} \le 1$$

With combined loads, L<sub>F</sub> must not exceed the value 1.

### **SPEED FACTOR**

FOR APPLICATIONS WITH HIGH SPEED OR SIGNIFICANT SHOCK AND VIBRATION: Calculated values of loads and bending moments must be increased by speed factor from the graph at right to obtain full rated life of profiled rail bearing system.

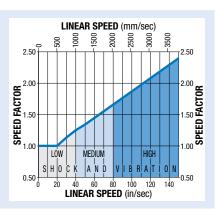


### PROFILED RAIL LUBRICATION

Proper lubrication of profiled rail bearing system is essential for normal operation and achievement of full rated life of MX--P actuators. Lubrication should be performed at intervals of 4,000,000 inches of travel or once every year, whichever occurs first. **However, operating conditions such as high speed or significant shock and vibration may require more frequent lubrication.** Please consult Tolomatic for recommendations.

### **Recommended grease types:**

- 1. Refined mineral oil-based multi-purpose grease with lithium thickening agent.
- 2. High-grade synthetic oil-based grease with urea thickening agent.

				MAXIMUM BENDING MOMENTS*			MAX. LOAD		THRUST
BORE			MIN	MxA	MyA	Mza	FzA	Fya	(at 100 PSI)
17/2	Inch	0.63 in	5.0 in	79 in-lbs	620 in-lbs	620 in-lbs	434 lbf	434 lbf	30.7 lbf
16	Metric	16 mm	127 mm	8.9 N-m	70.1 N-m	70.1 N-m	1,932 N	1,932 N	136 N
חבו	Inch	1.00 in	6.0 in	252 in-lbs	1,610 in-lbs	1,610 in-lbs	898 lbf	898 lbf	78.5 lbf
25	Metric	25 mm	152 mm	28.5 N-m	182 N-m	182 N-m	3,993 N	3,993 N	349 N
ממ	Inch	1.25 in	7.0 in	453 in-lbs	2,202 in-lbs	2,202 in-lbs	1,138 lbf	1,138 lbf	123 lbf
32	Metric	32 mm	178 mm	51.1 N-m	249 N-m	249 N-m	5,063 N	5,063 N	546 N
	Inch	1.50 in	8.5 in	1,208 in-lbs	3,601 in-lbs	3,601 in-lbs	1,472 lbf	1,472 lbf	177 lbf
40	Metric	38 mm	216 mm	137 N-m	407 N-m	407 N-m	6,549 N	6,549 N	786 N
	Inch	2.00 in	8.6 in	1,623 in-lbs	4,966 in-lbs	4,966 in-lbs	2,028 lbf	2,028 lbf	314 lbf
50	Metric	50 mm	218 mm	183 N-m	561 N-m	561 N-m	9,020 N	9,020 N	1,397 N
	Inch	2.50 in	13.0 in	2,038 in-lbs	9,508 in-lbs	9,508 in-lbs	2,583 lbf	2,583 lbf	491 lbf
63	Metric	64 mm	330 mm	230 N-m	1,074 N-m	1,074 N-m	11,490 N	11,490 N	2,184 N

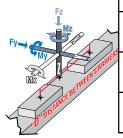

\*At minimum "D" distance between carriers see graph below for other distances

With combined loads, LF must not exceed the value 1.

$$L_F = \frac{Mx}{Mx_{max}} + \frac{My}{My_{max}} + \frac{Mz}{Mz_{max}} + \frac{Fy}{Fy_{max}} + \frac{Fz}{Fz_{max}} \le 1$$

A


Ratings are the maximum values for shock-free, vibration-free operation in a typical industrial environment.

Contact Tolomatic for assistance in selecting the most appropriate actuator for your application.



NOTE: Mating surface of component mounted to carrier must maintain a flatness of at least 0.0015" (0.040 mm)

Mya & Mza vs. DISTANCE

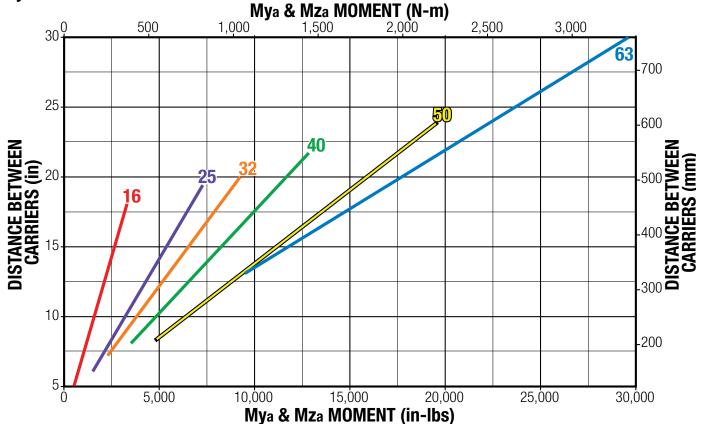


Ratings were calculated with the following conditions:

- 1.) Coupling between carriers is rigid.
- 2.) Load is equally distributed between carriers.
- 3.) Coupling device applies no misaligned loads to carriers.


### **DEFLECTION ABOUT Y AXIS**

**BC2** 

BC3

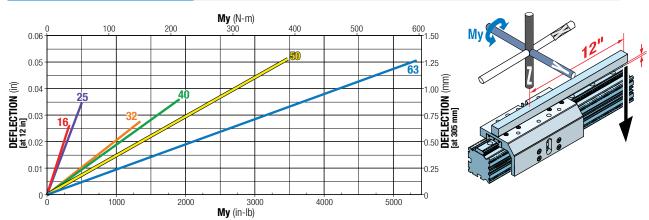

### **DEFLECTION ABOUT Z AXIS**

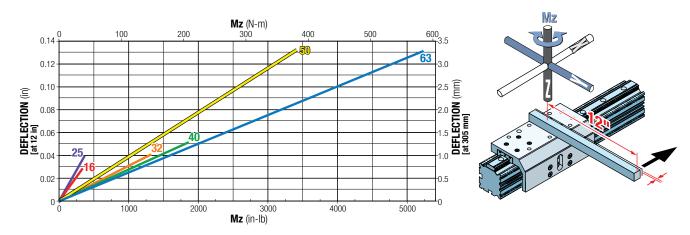

### **DEFLECTION TESTING WAS DONE UNDER THESE CRITERIA:**

- 1.) Actuator was properly mounted with distance between mounting plates within recommendations (see Tube Clamp Requirements page MXP\_24)
- 2.) Deflection was measured at 12" from center of carrier as shown

		SIZE	16	25	32	40	50	63
ACTUAL	BORE SIZE	in	0.63	1.00	1.25	1.50	2.00	2.50
ACTUAL	DUNE SIZE	mm	16	25	32	38	50	64
	N INTERNAL	lb	0.73	1.70	3.58	5.57	11.07	22.59
	BEARING	kg	0.33	0.77	1.62	2.53	5.02	10.25
BASE	S SOLID	lb	1.07	2.30	4.68	7.64	14.03	30.78
WEIGHT	BEARING	kg	0.48	1.04	2.12	3.47	6.36	13.96
	P PROFILED	lb	1.25	2.94	5.89	9.91	17.22	31.64
	RAIL	kg	0.57	1.33	2.67	4.5	7.81	14.35
	N INTERNAL & S SOLID	lb/in	0.082	0.134	0.233	0.306	0.513	0.879
WEIGHT PER UNIT		kg/mm	0.0015	0.0024	0.0042	0.0055	0.0092	0.0157
OF STROKE	P PROFILED RAIL	lb/in	0.102	0.192	0.316	0.491	0.701	1.153
		kg/mm	0.0018	0.0034	0.0056	0.0088	0.0125	0.0206
MAVIMIIM	STROKE LENGTH	in	206	206	205	203	203	103
INIAVIINIOINI 2	THORE LENGTH	mm	5232	5232	5207	5156	5156	2616
AUXILIARY	CARRIER; MIN.	in	5.00	6.00	7.00	8.50	8.60	13.00
"D" BETWI	"D" BETWEEN CARRIERS		127.0	152.4	177.8	215.9	218.4	330.2
MAXIMUN	/I OPERATING	PSI			1(	00		
PRE	SSURE	bar			6	.9		
TEMPEDA	TURE RANGE	°F			20 to	140		
I LIVIT ENA	TOTAL HANGE	$^{\circ}\!\mathcal{C}$			-7 t	o 60		

### TIPS FOR MAXIMIZING BAND CYLINDER LIFE

TO GET THE MOST LIFE OUT OF YOUR MXP BAND CYLINDER FOLLOW THESE SIMPLE GUIDELINES WHEN SIZING A BAND CYLINDER FOR AN APPLICATION.

Four factors that affect the life of a band cylinder are Load, Speed, Environment and Deceleration. The following tips will help you select the appropriate band cylinder for a specific application's loads and speeds to maximize actuator life.

# LOAD: KEEP THE LOAD FACTOR LESS THAN 1

Applications with multiple loads put additional stress on the band cylinder's bearing system. It is important to account for all these loads to make sure the bearing system is not over loaded. Both static and dynamic loads need to be addressed.

The formula below can be used to calculate the load factor:

$$L_F = \frac{Mx}{Mx_{max}} + \frac{My}{My_{max}} + \frac{Mz}{Mz_{max}} + \frac{Fy}{Fy_{max}} + \frac{Fz}{Fz_{max}} \le 1$$

## 2 SPEED: REDUCE SPEEDS

High speeds and cycle rates stress the band cylinder's guidance system more than slower applications. Keeping speeds reduced will optimize the life of the actuator.

# 3 ENVIRONMENT: KEEP CONTAMINATION OFF BAND AND MOVING SURFACES


Contamination will decrease band cylinder service life. Service life can be improved by orienting the band and bearing system 180 degrees from the contamination source. For instance, if solid particulates are falling on the actuator, it is best to try to orient the band cylinder so that the band and bearing system are shielded from the particulates.


# DECELERATION: DECELERATE WITH SHOCK ABSORBERS

Shock absorbers provide the most controlled and reliable deceleration at the end of stroke. Stopping in a controlled fashion will significantly decrease the inertia loads on the carrier bearings, extending cylinder life. The best location for shock absorbers is at the center of gravity of the load.

**MXP16** (ALL BEARINGS) LOAD (kg) 2.7 100 LIGHT DUTY FINAL VELOCITY (in/sec) 80 60 CUSHION LIMIT CUSHION LIMIT 40-DUT 8-8 LOAD (lb)

### **MXP25** (ALL BEARINGS)

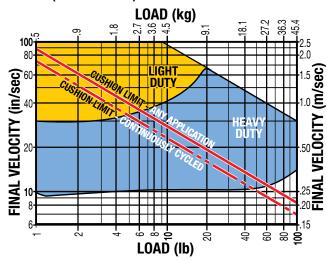


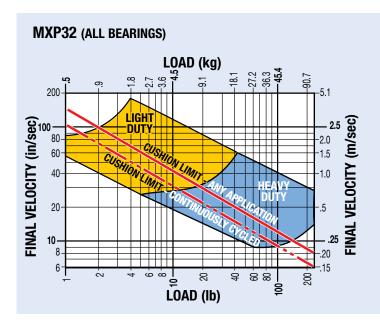


### **MXP40** (ALL BEARINGS) LOAD (kg) 27.2 36.3 45.4 2.7 3.6 4.5 18.1 90.7 9.1 100t 80 2.0 1.5 **(398/ш)** FINAL VELOCITY (in/sec) DUTY .50 05.. EINAL VELOCITY 50.. 200-`≜ ≅ LOAD (lb) 8 8 **8**

### MXP50 (ALL BEARINGS)

**BC2** 

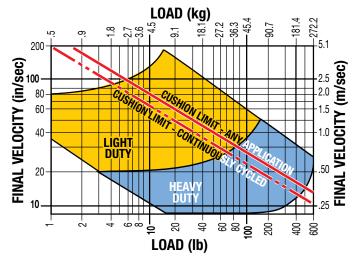


NOTE: If final (impact) velocity cannot be calculated directly, a reasonable guideline to use is 2X average velocity.

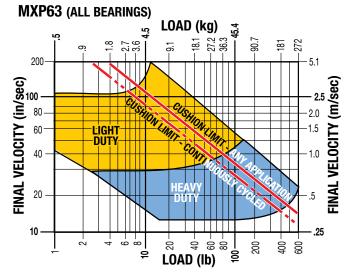


NOTE: When 2 shock absorbers are ordered, the MXP will be assembled with NO internal cushion seals.

## **TUBE CLAMP REQUIREMENTS**


### **N** - INTERNAL BEARING

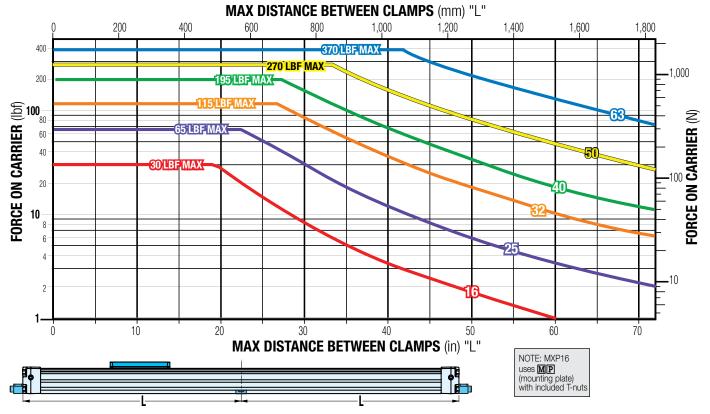


### **S** - SOLID BEARING

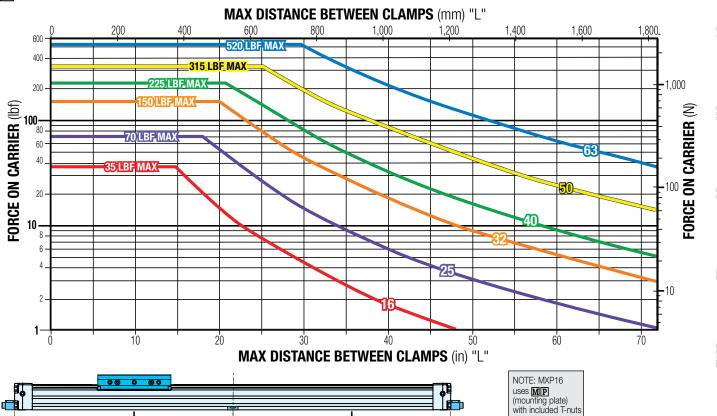


ABT

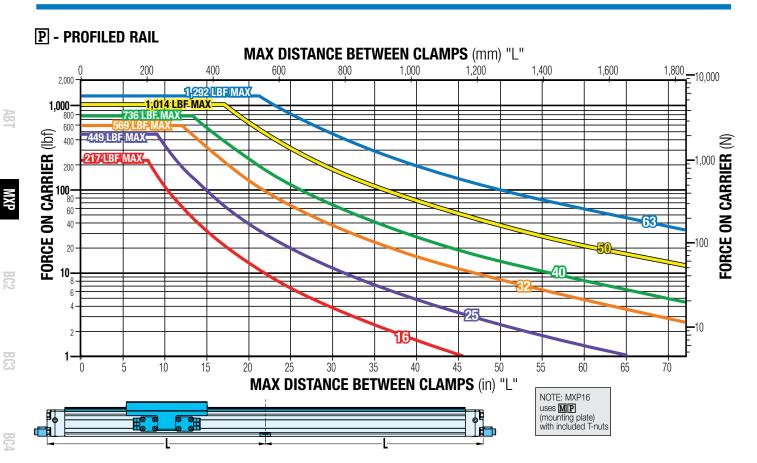

## **N-INTERNAL BEARING ACTUATOR DIMENSIONS**

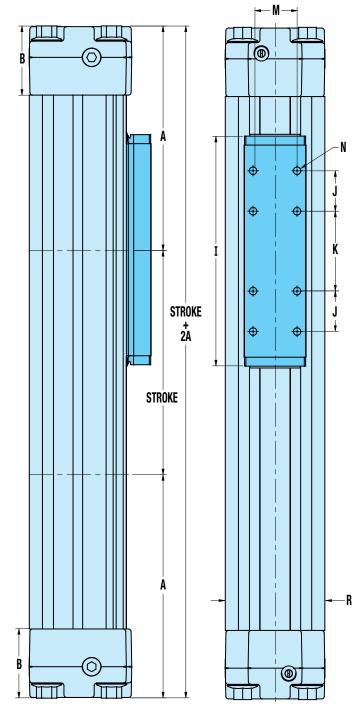


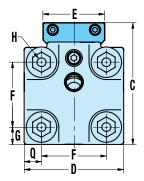

	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
Α	3.13	3.94	4.90	5.82	6.29	8.45
mm	79.6	100.2	124.5	147.7	159.8	214.5
В	0.55	1.11	1.50	1.50	1.97	1.97
mm	14.0	28.3	38.1	38.0	50.0	50.0
С	1.55	2.07	2.67	2.98	3.86	4.76
mm	39.3	52.6	67.8	75.8	98.1	120.8
D	1.18	1.65	2.18	2.52	3.01	3.94
mm	30.0	42.0	55.4	64.0	78.7	100.0
Ε	0.83	0.83	1.36	1.61	2.13	2.44
mm	21.0	21.0	34.5	41.0	54.0	62.0
F	0.85	1.10	1.42	1.81	2.25	2.87
mm	21.5	27.9	36.1	46.0	57.2	73.0
G	0.17	0.25	0.38	0.35	0.43	0.53
mm	4.3	6.3	9.7	9.0	10.8	13.5
Н	#8-32 (8)	#10-24 (8)	1/4-20 (8)	1/4-20 (8)	5/16-18 (8)	5/16-18 (8)
mm	M4x0.7 (8)	M5x0.8 (8)	M6x1.0 (8)	M6x1.0 (8)	M8x1.25 (8)	M8x1.25 (8)
I	3.78	4.45	5.04	5.87	6.57	9.69
mm	96.0	113.0	128.0	149.0	166.8	246.0
J	0.59	0.79	0.89	0.63	1.13	1.18
mm	15.0	20.0	22.5	15.9	28.6	30.0
K	1.18	1.57	1.75	3.00	2.25	4.33
mm	30.0	40.0	44.5	76.2	57.2	110.0
M	0.63	0.59	0.96	1.05	1.50	1.69
mm	16.0	15.0	24.5	26.7	38.1	43.0
N	#6-32 (8)	#8-32 (8)	#10-32 (8)	1/4-20 (8)	5/16-18 (8)	3/8-16 (8)
mm	M3x0.5 (8)	M4x0.7 (8)	M5x0.8 (8)	M6x1.0 (8)	M8x1.25 (8)	M10x1.5 (8)
Q	0.17	0.28	0.38	0.35	0.43	0.53
mm	4.3	7.0	9.7	9.0	10.8	13.5
R	1.18	1.65	2.18	2.52	3.10	3.94
mm	30.00	42.00	55.37	64.00	78.74	100.00

8


# DUAL END PORTING 16mm BORE ONE THIS

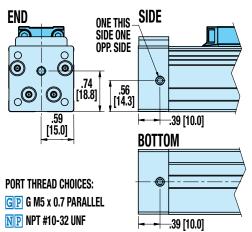


### **SINGLE-END PORTING**


Not Available for 16mm BORE


## 25mm BORE

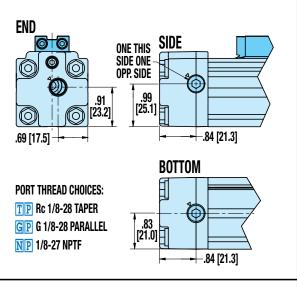

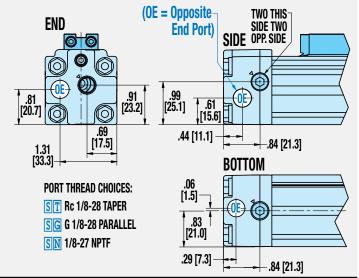

## 32mm BORE

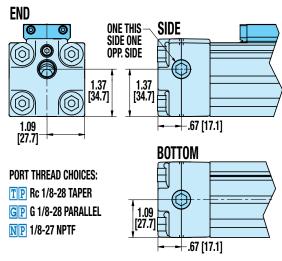


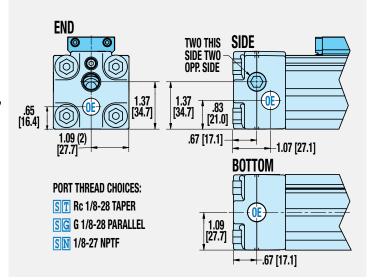


Dimensions in inches [brackets indicate dimensions in millimeters]

### **DUAL END PORTING** SINGLE-END PORTING TWO THIS-SIDE TWO **40mm** OPP. SIDE **END END** (0E = Opposite - Opp**BORE** ONE THIS SIDE SIDE SIDE ONE **End Port)** (O) **(10)** OPP. SIDE 1.46 [37.0] 1.46 [37.0] .94 [24.0] [37.0] [37.0] **6** (O) **(**(0) .83 [21.0] .47 [12.0] .89 [22.5] <del>---</del> .47 [12.0] 1.26 [32.0] 1.26 [32.0] -1.08 [27.5] **BOTTOM BOTTOM** PORT THREAD CHOICES: PORT THREAD CHOICES: TP Rc 1/4-19 TAPER ST Rc 1/4-19 TAPER **₩**Œ 1.26 [32.0] GP G 1/4-19 PARALLEL SG G 1/4-19 PARALLEL 1.26 [32.0] NP 1/4-18 NPTF **SN** 1/4-18 NPTF .47 [12.0] .47 [12.0] **—1.10 [28.0]** 50mm **END END BORE** SIDE SIDE **TWO THIS** ONE THIS 0 SIDE ONE SIDE TWO $\bigcirc$ OPP. SIDE OPP. SIDE 1.11 [28.2] 2.06 [52.2] 1.82 1.82 [52.2] 1.15 [29.1] [46.3] [46.3] 1.27 [32.3] -1.27 [32.3] 1.27 -.71 [18.0] .71 [18.0] -1.48 [37.5] [32.3] **BOTTOM BOTTOM** 1.27 [32.3] PORT THREAD CHOICES: PORT THREAD CHOICES: T P Rc 3/8-19 TAPER ST Rc 3/8-19 TAPER GP G 3/8-19 PARALLEL SG G 3/8-19 PARALLEL 1.27 [32.3] 1.27 [32.3] NP 3/8-18 NPTF SN 3/8-18 NPTF <del>-|</del>.71 [18.0] .71 [18.0] 1.48 [37.5] **63mm END END BORE** TWO THIS SIDE TWO SIDE SIDE ONE THIS 0 0 SIDE ONE OPP. SIDE 0 0 OPP. SIDE 0 1.24 [31.4] 2.22 [56.4] 2.22 [56.4] [31.4] [56.4] [56.4] **(** $\bigcirc$ **(** $\bigcirc$ 1.58 [40.0] <del>|--|</del> .67 [17.0] .67 [17.0] 1.58 [40.0] -1.46 [37.0] [40.0]



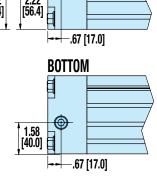

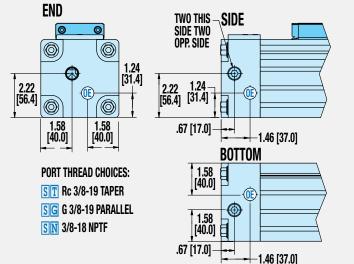



3D CAD available at www.tolomatic.com Always use configurated CAD solid model to determine critical dimensions

Dimensions in inches [brackets indicate dimensions in millimeters]


PORT THREAD CHOICES:

MXP

**B**64

## **N-INTERNAL BEARING OPTION DIMENSIONS**

### **AUXILIARY CARRIER, FLOATING MOUNT, FOOT MOUNT, TUBE CLAMPS**

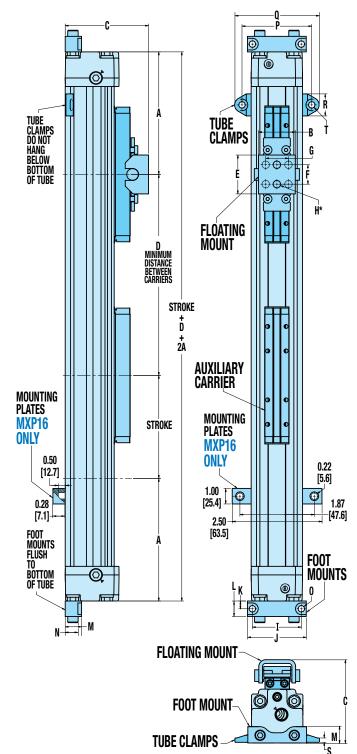

	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
A	3.13	3.94	4.90	5.82	6.29	8.45
mm	79.6	100.2	124.5	147.7	159.8	214.5
AUXII	IARY CAR	RIER				
D	5.00	6.00	7.00	8.50	8.60	13.00
mm	127.0	152.4	177.8	215.9	218.4	330.0
FLOA	TING MOUI	NT				
В	1.27	1.19	2.08	2.55	3.24	3.15
mm	32.2	30.1	52.8	64.7	82.3	80.0
С	1.97	2.66	3.70	4.07	4.66	5.57
mm	50.1	67.5	94.1	103.3	118.4	141.6
E	0.90	1.25	1.50	1.50	3.94	5.20
mm	22.9	31.8	38.1	38.1	100.1	132.0
F	0.50	0.63	0.75	0.79	3.15	4.33
mm	12.7	15.9	19.1	20.0	80.0	110.0
G	-	-	1.00	1.38	-	1.69
mm	-	-	25.4	35.0	-	43.0
H*	0.17(2)	0.24(2)	0.28(4)	0.28(4)	0.36(2)	0.34(4)
mm	4.3(2)	6.1(2)	7.1(4)	7.1(4)	9.1(2)	8.7(4)
F00T	MOUNTS					
I	1.26	1.57	2.01	2.52	3.11	3.94
mm	32.0	40.0	51.0	64.0	78.9	100.0
J	1.57	1.89	2.36	2.91	3.67	4.72
mm	40.0	48.0	60.0	74.0	93.2	120.0
K	0.16	0.25	0.37	0.47	0.50	0.59
mm	4.0	6.4	9.5	12.0	12.7	15.0
L	0.31	0.50	0.75	0.94	1.00	1.18
mm	8.0	12.7	19.0	24.0	25.4	30.0
М	0.35	0.52	0.91	0.73	1.00	1.06
mm	8.9	13.3	23.0	18.5	25.4	27.0
N	-	0.41	0.71	0.45	0.69	0.65
mm	-	10.3	18.0	11.4	17.4	16.5
0	0.18	0.20	0.22	0.28	0.35	0.42
mm	4.6	5.2	5.5	7.1	9.0	10.7
	CLAMPS					
P	-	2.24	2.92	3.26	3.84	5.19
mm	-	57.0	74.1	82.7	97.5	131.7
Q	-	2.72	3.44	3.81	4.39	5.93
mm	-	69.0	87.4	96.7	111.5	150.7
R	-	0.71	0.63	0.55	0.55	0.75
mm	-	18.0	16.0	14.0	14.0	19.0
S	-	0.14	0.17	0.15	0.15	0.24
mm	-	3.6	4.3	3.8	3.8	6.1
T	-	0.20	0.28	0.28	0.28	0.42
mm	-	5.2	7.1	7.1	7.1	10.7

\*MXP16. 25 & 50 use 2 center holes. MXP32, 40 & 63 use 4 corner holes


NOTE: Auxiliary carrier is N-Internal Bearing carrier, see page MXP\_25 for carrier size and mounting dimensions





BC3

### ADJUSTABLE AND FIXED SHOCK ABSORBERS

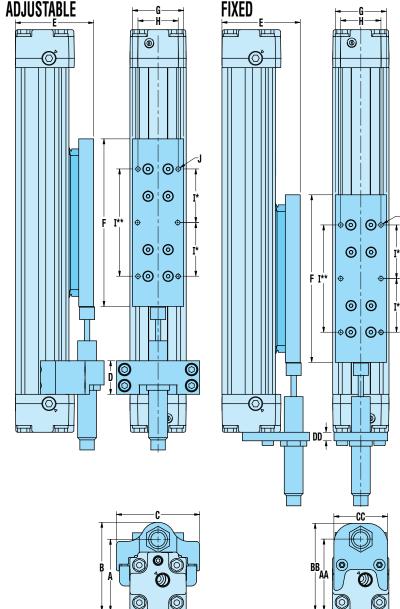

### **ADJUSTABLE SHOCK ABSORBER**

	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
Α	1.65	2.11	2.91	3.32	4.24	5.21
mm	42.0	53.5	73.8	84.4	107.6	132.4
В	1.97	2.61	3.35	3.87	4.87	5.91
mm	50.0	66.2	85.0	98.4	123.8	150.0
C	1.74	2.44	2.95	3.43	4.09	5.20
mm	44.3	62.0	74.9	87.0	103.9	132.0
D	0.71	0.98	1.25	0.98	1.22	1.26
mm	18.0	25.0	31.8	25.0	31.0	32.0

### Stroke Adder: Adjustable Shock Absorber

in	0.49	1.06	1.17	0.76	0.81	0.51
mm	12.4	26.8	29.8	19.3	20.5	13.0

NOTE: For each adjustable shock absorber ordered, add Stroke Adder value to required stroke to determine configurated actuator stroke.

Required + Adj. Stroke Shock x Adder Quantity value Configurated = Actuator Stroke

Example: MXP25N, 500mm stroke required, 2 adjustable shocks

 $500 + (2 \times 26.8) = 500 + 53.6 = 553.6$ mm

### **★ SHOCK PLATE**

		MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
	Е	1.81	2.28	3.17	3.61	4.55	5.65
	mm	46.0	<i>57.9</i>	80.5	91.8	115.6	143.4
	F	3.86	4.92	5.20	6.72***	6.65	10.29****
	mm	98.0	125.0	132.0	170.8***	168.8	261.4****
	G	0.94	1.50	1.32	1.61	2.13	2.44
	mm	24.0	38.1	33.5	41.0	54.0	62.0
	Н	0.63	1.18	0.96	1.05	1.50	1.69
	mm	16.0	30.0	24.5	26.7	38.1	43.0
	I*	0.89	1.57	-	-	-	-
	mm	22.5	40.0	-	-	-	-
	I**	-	-	1.75	3.00	2.25	4.33
	mm	-	-	44.5	76.2	57.2	110.0
	J	#8-32	#8-32	#10-32	1/4-20	5/16-18	3/8-16
_	J	(6)	(6)	(4)	(4)	(4)	(4)
	mm	M4x0.8	M4x0.8	M5x0.8	M6x1.0	M8x1.25	M10x1.5
		(6)	(6)	(4)	(4)	(4)	(4)

\*MXP16 & 25 Shock plate has 6 mounting holes

### **FIXED SHOCK ABSORBER**

	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
AA	1.65	2.11	2.91	3.32	4.24	5.21
mm	42.0	53.5	73.8	84.4	107.6	132.3
BB	1.95	2.57	3.42	3.87	5.09	5.92
mm	49.5	65.3	86.8	98.4	129.2	150.3
CC	1.17	1.57	2.00	2.44	2.83	3.66
mm	29.8	40.0	50.8	62.0	72.0	93.0
DD	0.13	0.25	0.25	0.25	0.50	0.50
mm	3.3	6.4	6.4	6.4	12.7	12.7

NOTE: Auxiliary carrier is N-Internal Bearing carrier, see page MXP\_25 for carrier size and mounting dimensions



99


**2** 

<sup>\*\*</sup>MXP32, 40, 50 & 63 Shock plate has 4 mounting holes

<sup>\*\*\*\*</sup>MXP40 Shock Stop Plate has impact bolts. Actual plate length is 5.98" (152mm); Impact bolts, one on each end, add .74" (18.8mm) to total length


<sup>\*\*\*\*</sup>MXP63 Shock Stop Plate has impact bolts. Actual plate length is 9.84" (250mm); impact bolts, one on each end, add .45" (11.4mm) to total length

## **S-SOLID BEARING ACTUATOR DIMENSIONS**

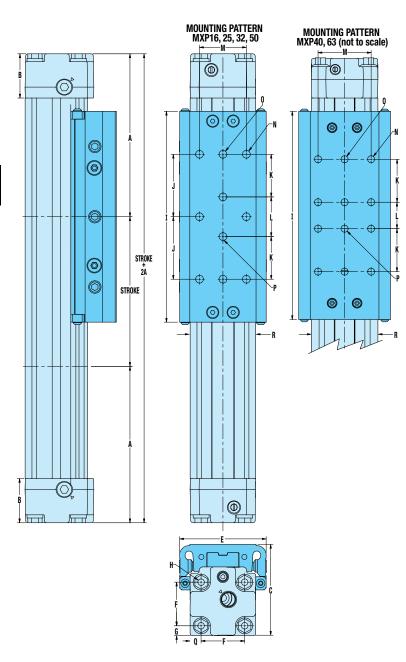


	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
Α	3.13	3.94	4.90	5.82	6.29	8.45
mm	79.6	100.2	124.5	147.7	159.8	214.5
В	0.55	1.11	1.50	1.50	1.97	1.97
mm	14.0	28.3	38.1	38.0	50.0	50.0
C	1.80	2.30	3.06	3.51	4.44	5.48
mm	45.8	58.4	77.8	89.2	112.8	139.1
D	1.18	1.65	2.18	2.52	3.01	3.94
mm	30.0	42.0	55.4	64.0	78.7	100.0
Е	1.58	2.18	2.86	3.47	4.01	5.59
mm	40.1	55.4	72.6	88.2	104.1	142.0
F	0.85	1.10	1.42	1.81	2.25	2.87
mm	21.5	27.9	36.1	46.0	57.2	73.0
G	0.17	0.25	0.38	0.35	0.43	0.53
mm	4.3	6.3	9.7	9.0	10.8	13.5
Н	#8-32 (8)	#10-24 (8)	1/4-20 (8)	1/4-20 (8)	5/16-18 (8)	5/16-18 (8)
mm	M4x0.7 (8)	M5x0.8 (8)	M6x1.0 (8)	M6x1.0 (8)	M8x1.25 (8)	M8x1.25 (8)
I	4.12	5.31	6.02	7.87	7.91	12.11
mm	104.6	135.0	153.0	200.0	200.8	307.5
J	1.18	1.57	1.77	-	1.87	-
mm	30.0	40.0	45.0	-	47.6	-
K	-	1.07	1.10	1.63	1.25	1.50
mm	-	27.3	28.0	41.3	31.8	38.1
L	-	1.00	1.00	1.00	2.50	3.00
mm	-	25.4	25.4	25.4	63.5	76.2
M	1.18	1.18	1.73	2.01	2.59	3.25
mm	30.0	30.0	44.0	51.0	65.8	82.6
N	#8-32 (6)	1/4-20 (6)	1/4-20 (6)	5/16-18 (8)	3/8-16 (6)	3/8-16 (8)
mm	M4x0.7 (6)	M6x1.0 (6)	M8x1.25 (6)	M8x1.25 (8)	M10x1.5 (6)	M10x1.5 (8)
0	-	#10-32 (2)	1/4-20 (2)	5/16-18 (2)	3/8-16 (2)	3/8-16 (2)
mm	-	M6x1.0 (2)	M8x1.25 (2)	M8x1.25 (2)	M10x1.5 (2)	M10x1.5 (2)
P	-	1/4-20 (2)	1/4-20 (2)	1/4-20 (2)	3/8-16 (2)	3/8-16 (2)
mm	-	M6x1.0 (2)	M8x1.25 (2)	M8x1.25 (2)	M10x1.5 (2)	M10x1.5 (2)
Q	0.17	0.28	0.38	0.35	0.43	0.53
mm	4.3	7.0	9.7	9.0	10.8	13.5
R	1.18	1.65	2.18	2.52	3.10	3.94
mm	30.00	42.00	55.37	64.00	78.74	100.00

## S-SOLID BEARING PORTING DIMENSIONS MXP16S, MXP25S, MXP32S

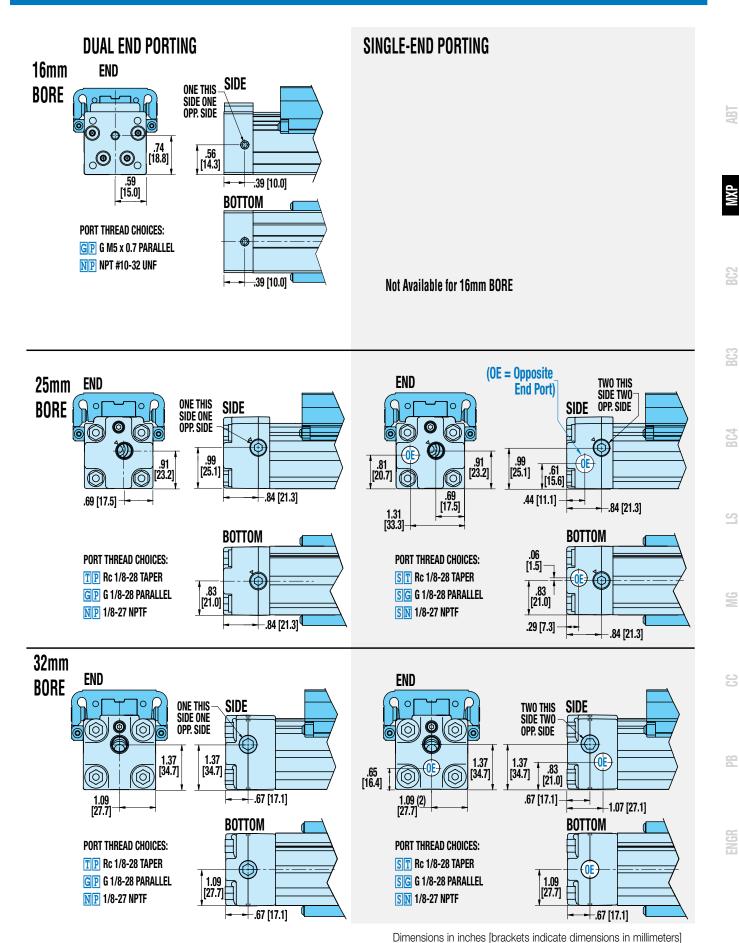


## S-SOLID BEARING PORTING DIMENSIONS MXP40S, MXP50S, MXP63S

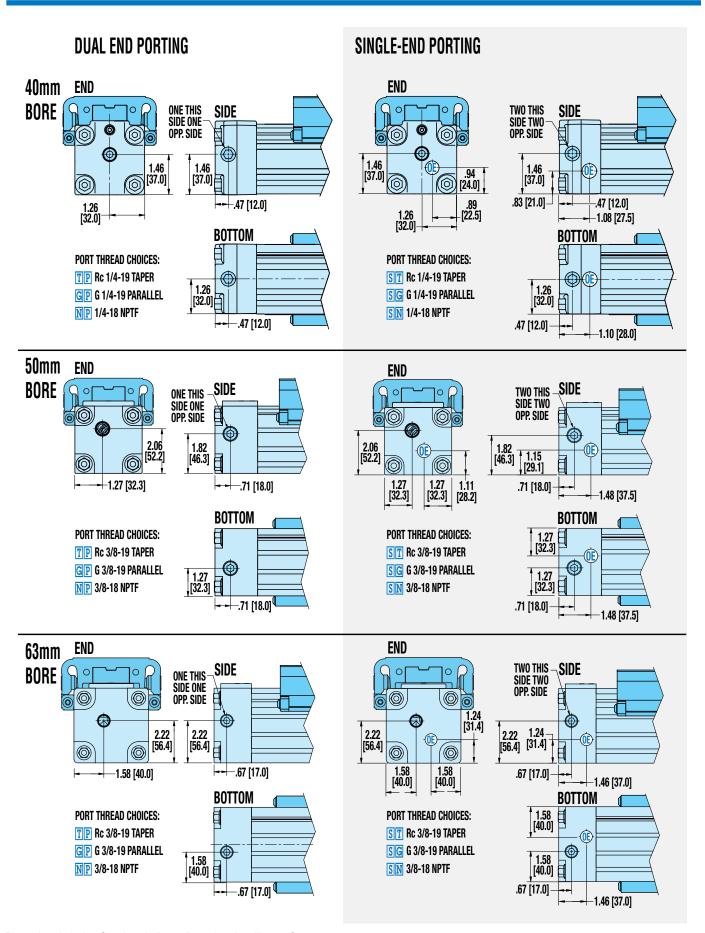

Dimensions in inches [brackets indicate dimensions in millimeters]



### **AUXILIARY CARRIER, FLOATING MOUNT, FOOT MOUNT, TUBE CLAMPS**

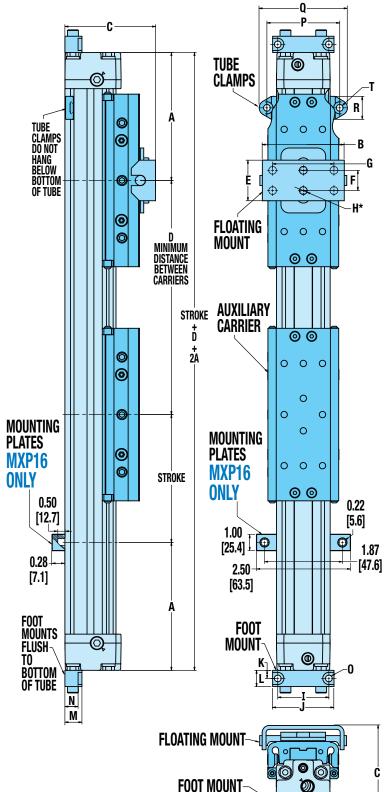


	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
Α	3.13	3.94	4.90	5.82	6.29	8.45
mm	79.6	100.2	124.5	147.7	159.8	214.5
AUX	ILIARY CA	ARRIER				
D	5.00	6.00	7.00	8.50	8.60	13.00
mm	127.0	152.4	177.8	215.9	218.4	330.0
FL0/	ATING MO	UNT				
В	1.86	2.52	3.37	4.32	5.04	6.10
mm	47.3	64.1	85.6	109.7	128.0	155.0
C	2.31	2.80	3.67	4.26	5.24	6.17
mm	58.7	71.0	93.3	108.2	133.1	156.8
Е	0.98	1.25	2.76	3.94	3.94	5.00
mm	25.0	31.8	70.1	100.0	100.1	127.0
F	0.47	0.63	1.97	2.95	3.15	3.94
mm	12.0	15.9	50.0	74.9	80.0	100.1
G	-	-	-	2.17	-	2.76
mm	-	-	-	55.1	-	70.1
H*	0.18(2)	0.24(2)	0.28(2)	0.28(4)	0.36(2)	0.34(4)
mm	4.5(2)	6.1(2)	7.1(2)	7.1(4)	9.1(2)	8.7(4)
F00	T MOUNT					
I	1.26	1.57	2.01	2.52	3.11	3.94
mm	32.0	40.0	51.0	64.0	78.9	100.0
J	1.57	1.89	2.36	2.91	3.67	4.72
mm	40.0	48.0	60.0	74.0	93.2	120.0
K	0.16	0.25	0.37	0.47	0.50	0.59
mm	4.0	6.4	9.5	12.0	12.7	15.0
L	0.31	0.50	0.75	0.94	1.00	1.18
mm	8.0	12.7	19.0	24.0	25.4	30.0
M	0.35	0.52	0.91	0.73	1.00	1.06
mm	8.9	13.3	23.0	18.5	25.4	27.0
N	-	0.41	0.71	0.45	0.69	0.65
mm	-	10.3	18.0	11.4	17.4	16.5
0	0.18	0.20	0.22	0.28	0.35	0.42
mm	4.6	5.2	5.5	7.1	9.0	10.7
TUBI	E CLAMPS					
Р	-	2.24	2.92	3.26	3.84	5.19
mm	-	57.0	74.1	82.7	97.5	131.7
Q	-	2.72	3.44	3.81	4.39	5.93
mm	-	69.0	87.4	96.7	111.5	150.7
R	-	0.71	0.63	0.55	0.55	0.75
mm	-	18.0	16.0	14.0	14.0	19.0
S	-	0.14	0.17	0.15	0.15	0.24
mm	-	3.6	4.3	3.8	3.8	6.1
T	-	0.20	0.28	0.28	0.28	0.42
mm	-	5.2	7.1	7.1	7.1	10.7

\*MXP16, 25, 32 & 50 use 2 center holes, MXP40 & 63 use 4 corner holes

NOTE: Auxiliary carrier is S-Solid Bearing carrier, see page MXP\_30 for carrier size and mounting dimensions

**TUBE CLAMPS** 

### ADJUSTABLE AND FIXED SHOCK ABSORBERS

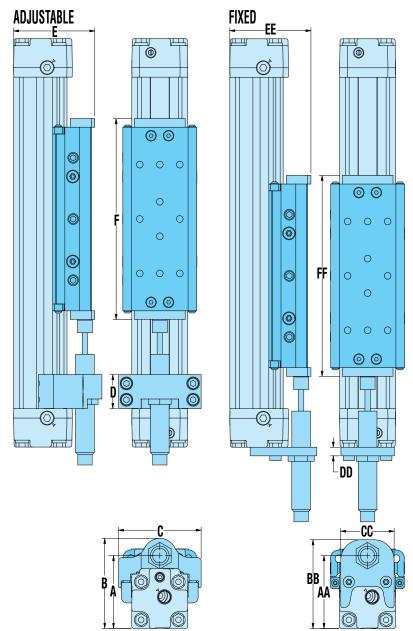

### **ADJUSTABLE SHOCK ABSORBER**

	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
Α	1.65	2.11	2.91	3.32	4.24	5.21
mm	42.0	53.5	73.8	84.4	107.6	132.4
В	1.97	2.61	3.35	3.87	4.87	5.91
mm	50.0	66.2	85.0	98.4	123.8	150.0
C	1.74	2.44	2.95	3.43	4.09	5.20
mm	44.3	62.0	74.9	87.0	103.9	132.0
D	0.71	0.98	1.25	0.98	1.22	1.26
mm	18.0	25.0	31.8	25.0	31.0	32.0
Е	1.80	2.39 <sup>1</sup>	$3.20^{2}$	$3.57^3$	4.53 <sup>4</sup>	5.50 <sup>5</sup>
mm	45.8	60.8 <sup>1</sup>	81.2 <sup>2</sup>	90.73	115.1 <sup>4</sup>	139.7 <sup>5</sup>
F	4.12	5.81 <sup>1</sup>	6.76 <sup>2</sup>	8.61 <sup>3</sup>	8.35 <sup>4</sup>	12.56 <sup>5</sup>
mm	104.6	147.7 <sup>1</sup>	171.8 <sup>2</sup>	218.8 <sup>3</sup>	212.2 <sup>4</sup>	318.9 <sup>5</sup>

### Stroke Adder: Adjustable Shock Absorber

in.	0.62	1.50	1.96	1.70	1.66	1.65
mm	15.7	38.1	49.7	43.3	42.1	41.8

A NOTE: For each adjustable shock absorber ordered, add Stroke Adder value to required stroke to determine configurated actuator stroke.

Adj. Stroke Shock x Adder Configurated Required \_ Actuator Quantity value

Example: MXP25S, 500mm stroke required, 2 adjustable shocks

 $500 + (2 \times 38.1) = 500 + 76.2 = 576.2$ mm

### **FIXED SHOCK ABSORBER**

	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
AA	1.65	2.11	2.91	3.32	4.24	5.21
mm	42.0	53.5	73.8	84.4	107.6	132.4
BB	1.95	2.57	3.42	3.87	5.10	5.92
mm	49.5	65.3	86.8	98.4	129.6	150.3
CC	1.17	1.57	2.00	2.44	2.83	3.66
mm	29.8	40.0	50.8	62.0	72.0	93.0
DD	0.13	0.25	0.25	0.25	0.50	0.50
mm	3.3	6.4	6.4	6.4	12.7	12.7
EE	1.80	2.39 <sup>1</sup>	$3.20^{2}$	$3.57^3$	4.53 <sup>4</sup>	$5.50^{5}$
mm	45.8	60.8 <sup>1</sup>	81.2 <sup>2</sup>	<i>90.7</i> <sup>3</sup>	115.1 <sup>4</sup>	139.7 <sup>5</sup>
FF	4.12	5.81 <sup>1</sup>	6.76 <sup>2</sup>	8.61 <sup>3</sup>	8.35 <sup>4</sup>	12.56 <sup>5</sup>
mm	104.6	147.7 <sup>1</sup>	171.8 <sup>2</sup>	218.8 <sup>3</sup>	212.2 <sup>4</sup>	318.9 <sup>5</sup>

<sup>&</sup>lt;sup>1</sup>Carrier is standard MXP25S, 2.30" (58.4mm) high X 5.31" (135.0mm) long, Impact plates on each end of carrier add .09" (2.4mm) to total height and .50" (12.7mm) to total length

NOTE: Auxiliary carrier is S-Solid Bearing carrier, see page MXP\_30 for carrier size and mounting dimensions






<sup>&</sup>lt;sup>2</sup>Carrier is standard MXP32S, 3.06" (77.8mm) high X 6.02" (153.0mm) long, Impact bolts on each end of carrier add .13" (3.4mm) to total height and .74" (18.8mm) to total length

<sup>&</sup>lt;sup>3</sup>Carrier is standard MXP40S, 3.51" (89.2mm) high X 7.87" (200.0mm) long, Impact bolts on each end of carrier add .06" (1.5mm) to total height and .74" (18.8mm) to total length

<sup>&</sup>lt;sup>4</sup>Carrier is standard MXP50S, 4.44" (112.8mm) high X 7.91" (200.8mm) long, Impact bolts on each end of carrier add .09" (2.3mm) to total height and .45" (11.4mm) to total length

<sup>&</sup>lt;sup>5</sup>Carrier is standard MXP63S, 5.48" (139.1mm) high X 12.11" (307.5mm) long, Impact bolts on each end of carrier add .45" (11.4mm)

## P-PROFILED RAIL ACTUATOR DIMENSIONS

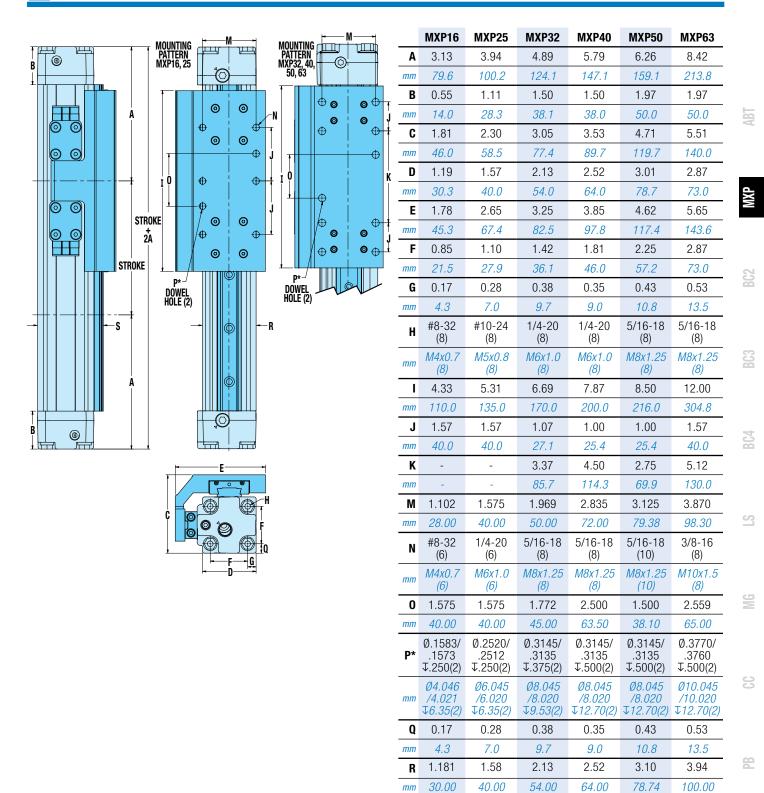

\*DOWEL HOLES

1.40

35.50

1.91

48.60

mm

S



2.48

62.87

2.89

73.50

3.69

93.74



4.53

115.00


.67 [17.1]

OPP. SIDE

.67 [17.1]

1.11 [28.1]

## P-PROFILED RAIL PORTING DIMENSIONS MXP40P, MXP50P, MXP63P

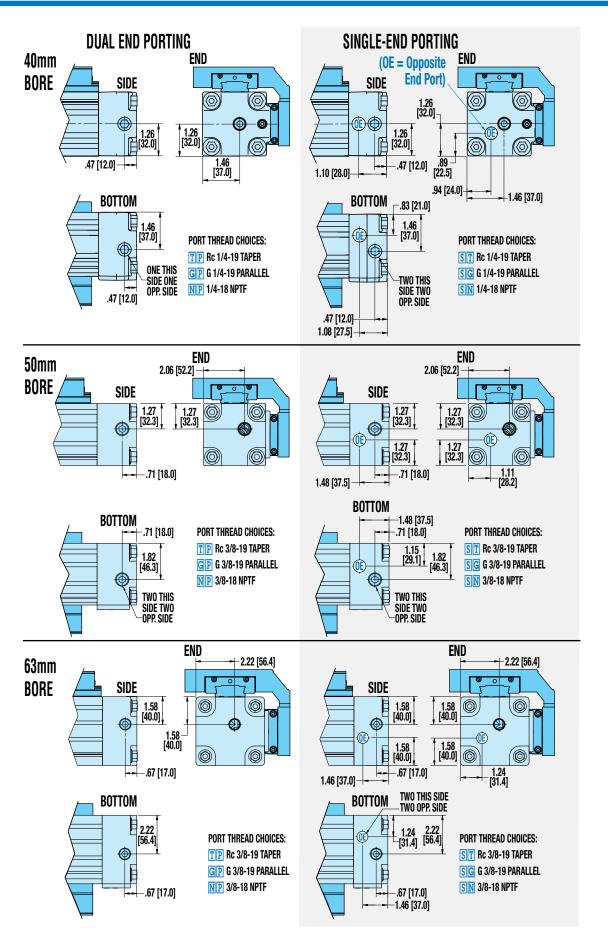


3D CAD available at www.tolomatic.com Always use configurated CAD solid model to determine critical dimensions



ABT BT

### **AUXILIARY CARRIER, FOOT MOUNT, TUBE CLAMPS**

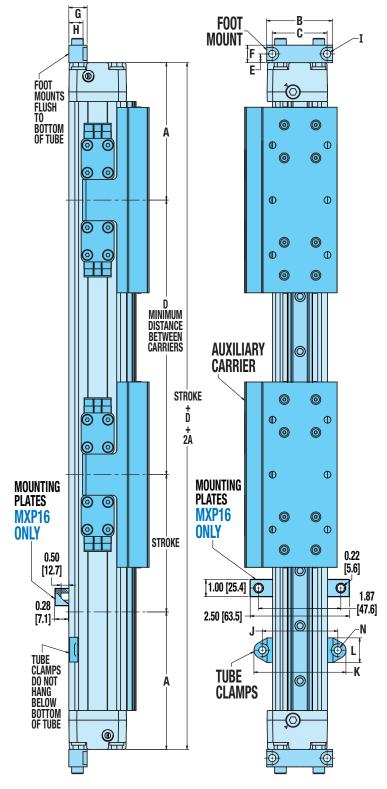


	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
Α	3.13	3.94	4.90	5.82	6.29	8.45
mm	79.6	100.2	124.5	147.7	159.8	214.5
ΑU	(ILIARY (	ARRIER				
D	5.00	6.00	7.00	8.50	8.60	13.00
mm	127.0	152.4	177.8	215.9	218.4	330.0
F00	T MOUN	Т				
В	1.57	1.89	2.36	2.91	3.67	4.72
mm	40.0	48.0	60.0	74.0	93.2	120.0
C	1.26	1.57	2.01	2.52	3.11	3.94
mm	32.0	40.0	51.0	64.0	78.9	100.0
Е	0.16	0.25	0.37	0.47	0.50	0.59
mm	4.0	6.4	9.5	12.0	12.7	15.0
F	0.31	0.50	0.75	0.94	1.00	1.18
mm	8.0	12.7	19.0	24.0	25.4	30.0
G	0.35	0.52	0.91	0.73	1.00	1.06
mm	8.9	13.3	23.0	18.5	25.4	27.0
Н	-	0.41	0.71	0.45	0.69	0.65
mm	-	10.3	18.0	11.4	17.4	16.5
	0.18	0.20	0.22	0.28	0.35	0.42
mm	4.6	5.2	5.5	7.1	9.0	10.7
TUE	BE CLAM	PS				
J	-	2.17	2.86	3.26	3.84	5.19
mm	-	55.0	72.7	82.7	97.5	131.7
K	-	2.64	3.39	3.81	4.39	5.93
mm	-	67.0	86.0	96.7	111.5	150.7
L	-	0.71	0.63	0.55	0.55	0.75
mm	-	18.0	16.0	14.0	14.0	19.0
M	-	0.14	0.17	0.15	0.15	0.24
mm	-	3.6	4.3	3.8	3.8	6.1
N	-	0.20	0.28	0.28	0.28	0.42
mm	-	5.2	7.1	7.1	7.1	10.7





NOTE: Auxiliary carrier is P-Prodiled Rail carrier, see page MXP\_35 for carrier size and mounting dimensions




### ADJUSTABLE AND FIXED SHOCK ABSORBERS

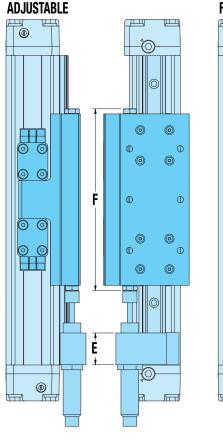

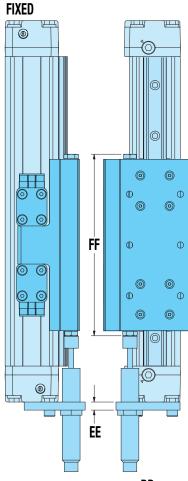

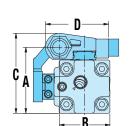

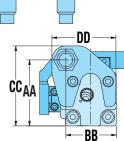

### **ADJUSTABLE SHOCK ABSORBER**

	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
Α	1.51	2.05	2.87	3.28	4.20	5.04
mm	38.3	52.0	72.9	83.2	106.7	128.0
В	1.38	1.56	2.25	2.63	3.55	3.97
mm	35.0	39.7	57.2	66.8	90.2	100.8
C	1.75	2.48	3.46	3.90	4.80	5.73
mm	44.5	63.0	87.9	99.0	121.8	145.5
D	1.54	1.96	2.63	3.17	3.55	4.07
mm	39.2	49.7	66.7	80.6	90.2	103.3
Е	0.79	0.98	1.00	0.98	1.26	1.26
mm	20.0	25.0	25.4	25.0	32.0	32.0
F	4.65 <sup>1</sup>	5.63 <sup>2</sup>	$7.43^{3}$	8.61 <sup>4</sup>	8.95 <sup>5</sup>	12.45 <sup>6</sup>
mm	118.0 <sup>1</sup>	143.0 <sup>2</sup>	188.8 <sup>3</sup>	218.8 <sup>4</sup>	227.4 <sup>5</sup>	<i>316.2</i> <sup>6</sup>

### Stroke Adder: Adjustable Shock Absorber

in	0.96	2.10	2.73	2.40	3.15	2.74
mm	24.4	53.3	69.3	61.0	80.0	69.6

A NOTE: For each adjustable shock absorber ordered, add Stroke Adder value to required stroke to determine configurated actuator stroke.

> Adj. Stroke \ Required \_ Shock x Adder Actuator Stroke Stroke Quantity value

Example: MXP25P, 500mm stroke required, 2 adjustable shocks

 $500 + (2 \times 53.3) = 500 + 106.6 = 606.6$ mm

### **FIXED SHOCK ABSORBER**

	MXP16	MXP25	MXP32	MXP40	MXP50	MXP63
AA	1.51	2.05	2.89	3.32	4.38	5.22
mm	38.3	52.0	73.4	84.4	111.2	132.5
BB	1.38	1.56	-	-	-	_
mm	<i>35.0</i>	39.7	-	_	-	_
CC	1.80	2.48	3.41	3.87	5.09	5.93
mm	45.8	63.0	86.5	98.4	129.2	150.5
DD	1.66	1.98	2.00	2.44	2.83	3.66
mm	42.2	50.4	50.8	62.0	72.0	93.0
EE	0.13	0.25	0.25	0.25	0.50	0.50
mm	3.3	6.4	6.4	6.4	12.7	12.7
FF	4.65 <sup>1</sup>	$5.63^2$	$7.43^{3}$	8.61 <sup>4</sup>	8.95 <sup>5</sup>	12.45 <sup>6</sup>
mm	118.0 <sup>1</sup>	143.0 <sup>2</sup>	188.8 <sup>3</sup>	218.8 <sup>4</sup>	227.4 <sup>5</sup>	<i>316.2</i> <sup>6</sup>

<sup>&</sup>lt;sup>1</sup>Carrier is standard MXP16P, 4.33" (110.0mm) long, Impact bolts on each end of carrier add .31" (8.0mm) to total length

NOTE: Auxiliary carrier is P-Prodiled Rail carrier, see page MXP\_35 for carrier size and mounting dimensions

<sup>&</sup>lt;sup>2</sup>Carrier is standard MXP25P, 5.31" (135.0mm) long, Impact bolts on each end of carrier add .31" (8.0mm) to total length

<sup>&</sup>lt;sup>3</sup>Carrier is standard MXP32P, 6.69" (170.0mm) long, Impact bolts on each end of carrier add .74" (18.8mm) to total length

<sup>&</sup>lt;sup>4</sup>Carrier is standard MXP40P, 7.87" (200.0mm) long, Impact bolts on each end of carrier add .74" (18.8mm) to total length

<sup>&</sup>lt;sup>5</sup>Carrier is standard MXP50P, 8.50" (216.0mm) long, Impact bolts on each end of carrier add .45" (11.4mm) to total length

<sup>&</sup>lt;sup>6</sup>Carrier is standard MXP63P, 12.00" (304.8mm) long, Impact bolts on each end of carrier add .45" (11.4mm) to total length

### **SPECIFICATIONS**

**B**C2

RoHS COMPLIANT

MX products offer a large number of sensing choices. There are 12 switch choices: reed, solid state PNP (sourcing) or solid state NPN (sinking); in normally open or normally closed; with flying leads or quick-disconnnects.

Commonly used for end-of-stroke positioning, these switches allow drop-in installation anywhere along the entire actuator length. The one-piece design includes the retained fastening hardware and is designed for any open side or bottom slot on the MX. The internal piston magnet is a standard feature, therefore these switches can be installed in the field at anytime.

Switches are used to send digital signals to PLC (programmable logic controller), TTL, CMOS circuit or other controller device. Switches contain reverse polarity protection. Solid state QD cables are shielded; shield should be terminated at flying lead end.

All switches are CE rated and are RoHS compliant. Switches feature bright red or yellow LED signal indicators; solid state switches also have green LED power indicators.

	Order Code	Lead	Switching Logic	Power LED	Signal LED	Operating Voltage	*Power Rating (Watts)	Switching Current (mA max.)	Current Consump- tion	Voltage Drop	Leakage Current	Temp. Range	Shock / Vibration
	RY	5m	SPST		Red	5 - 240							
REED	RK	Quick Disconnect	Normally Open	<b></b> Toloma	tic • 81009082	AC/DC *10.0	100mA	_	3.0 V	_			
1 22	NY	5m	SPST	_	Yellow	5 - 110	10.0	10.0 TOURIA		max.			
	NK	Quick Disconnect	Normally Closed	Toloma	tic 81009084	AC/DC							
	TY	5m	PNP (Sourcing)	Green	Yellow							14	
	TK	Quick Disconnect	Normally Open	Toloma	tic 81009088							to 158°F	50 G /
	KY	5m	NPN (Sinking)	Green	Red				20 mA @ 24V			[-10 to 70°C]	9 G
SOLID STATE	KK	Quick Disconnect	Normally Open	Toloma	tic 81009090	10 - 30	*3.0	100mA		2.0 V	0.05 mA		
SOLIE	PY	5m	PNP (Sourcing)	Green	Yellow	Vdc				max.	max.		
	PK	Quick Disconnect	Normally Closed	Toloma	tic 81009092								
	HY	5m	NPN (Sinking)	Green	Red								
	HK	Quick Disconnect	Normally Closed	Toloma	tic 81009094								


Enclosure classification IEC 529 IP67 (NEMA 6)


CABLES: Robotic grade, oil resistant polyurethane jacket, PVC insulation


▲\*WARNING: Do not exceed power rating (Watt = Voltage x Amperage). Permanent damage to sensor will occur.


### **SWITCHES**


### **WIRING DIAGRAMS**

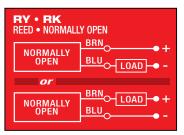


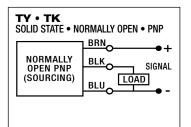


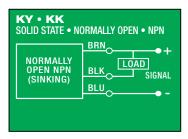


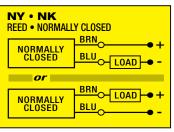

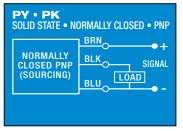

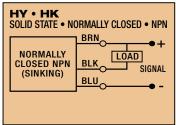







### **DIMENSIONS**







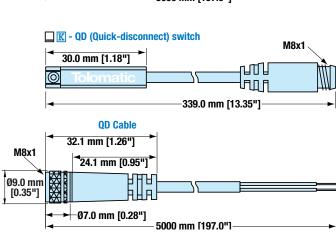

Dimensions in inches [brackets indicate dimensions in millimeters]

### MOUNTING DIMENSIONS

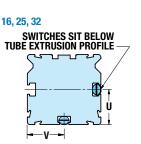

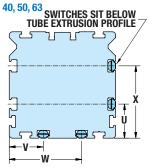


### **SWITCH MOUNTING**

	16	25	32	40	50	63
U	0.31	0.79	1.06	0.81	1.08	1.50
mm	7.9	20.0	27.0	20.5	27.4	38.0
٧	0.59	0.83	1.09	0.81	1.08	1.50
mm	15.0	21.0	27.7	20.5	27.4	38.0
W	-	-	-	1.71	2.02	2.44
mm	_	_	_	43.5	51.4	62.0
X	-	_	-	1.71	2.02	2.44
mm	_			43.5	51.4	62.0

### SWITCH INSTALLATION AND REPLACEMENT

Place switch in side groove on tube at desired location with "Tolomatic" facing outward. While applying light pressure to the switch, rotate the switch halfway into the groove. Maintaining light pressure, rotate the switch in the opposite direction until the it is fully inside the groove with "Tolomatic" visible. Re-position the switch to the exact location and lock the switch securely into place by tightening the screw on the switch.

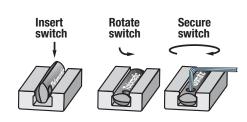

Fax (1-763-478-8080) or call Tolomatic (1-800-328-2174) with the above information. We will provide any assistance needed to determine the proper MXP Band Cylinder.

The process of selecting a load bearing actuator for a given application can be complex. It is highly recommended that you contact Tolomatic for assistance in selecting the best actuator for your application. The following overview of the selection quidelines are for educational purposes only.

### **DETERMINE BORE SIZE**

- Consult the Theoretical Force vs. Pressure graph. (See graph at right)
- Find the intersection of the available pressure and required thrust force. If the intersection falls below the plotted bore size curve, the actuator will supply adequate force for the application. If the intersection is above the curve, a larger cylinder bore size will be required.

NOTE: Additional force may be required to obtain the necessary acceleration within desired cycle time.

### COMPARE LOAD TO **MAXIMUM LOAD** CAPACITIES

Calculate the following static loads: Mx, My, Mz, Fy, Fz

Loads = Applied Moments + Forces

If the load of your application exceeds figures indicated in the MOMENT AND LOAD CAPACITY tables (See pages MXP\_14-19) consider:

- 1.) Higher\_capacity\_bearing style, i.e. N to S, S to P
- 2.) Larger Bore Cylinder
- 3.) Auxiliary Carrier
- 4.) Add External Guides



For combined loads the Load Factor (L<sub>F</sub>) must not exceed the value 1.

$$\label{eq:local_local_local_local} \boldsymbol{L_F} = \frac{\boldsymbol{Mx}}{\boldsymbol{Mx}_{max}} + \frac{\boldsymbol{My}}{\boldsymbol{My}_{max}} + \frac{\boldsymbol{Mz}}{\boldsymbol{Mz}_{max}} + \frac{\boldsymbol{Fy}}{\boldsymbol{Fy}_{max}} + \frac{\boldsymbol{Fz}}{\boldsymbol{Fz}_{max}} \leq 1$$

If L<sub>F</sub> exceeds the value 1, then consider the four choices listed in step #3.

### **SHOCKS**

If the intersection of the final velocity and load mass falls in the shaded regions, then shock absorbers should be used.

### CONSIDER PEAK DYNAMIC INERTIA MOMENTS

When a rigidly attached load mass is accelerated or decelerated, its inertia induces are excessive, consider the four choices listed in step #3 or consider these deceleration methods:

- Reduce final velocity with flow controls or reduced pressure.
- Pneumatic valve deceleration circuits. By reducing the speed before the cushion or shock is reached, the load can decelerate over a longer distance, thereby reducing the deceleration moments.
- Position shock absorbers at the load's center of gravity. This will greatly reduce the moment load applied to the carrier.

### P PROFILED RAIL **DECELERATION CONSIDERATIONS**

While the P Profiled Rail MXP is capable of carrying very large loads, consideration must be given to how to stop the load at the end of stroke. If Tolomatic cushions or shocks are used, stay within the specifications defined. If another type of shock absorber is used, be sure that the deceleration of the load is smooth and over an adequate distance.

## **DETERMINE TUBE CLAMP**

- Consult the Tube Clamp Requirement chart the model selected (page  $MXP_23-24$ ).
- Cross-reference the load force and maximum distance between supports.
- Divide stroke length by max. distance calculated above to determine number of tube clamps to order.

### **CONSIDER PORTING** AND OPTIONS

 Choose Single End Porting or Dual End Porting

 Choose NPT, Metric Parallel (ISO-G/BSP) or Metric Taper (Rc/BST) Ports


### **OPTIONS:**

- •Switches Reed, Solid State PNP or NPN, all available normally open or normally closed
- •Shock Absorbers Heavy or light duty, fixed or adjustable mount - recommended for longer life in most applications
- Foot Mounts
- Floating Mount Bracket - used when lack of parallelism occurs between the cylinder and an externally guided and supported load. Available for **N** internal & **S** solid

# bearing styles

# REQUIREMENTS


### S SOLID BEARING 2:1 RULE

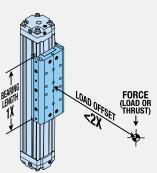

For applications using [S] solid bearings, binding or interrupted motion may occur if the load offset is equal to or greater than twice the bearing length (1X). LOAD OFFSET is defined as: the distance from the applied force (or the load center of gravity) to the centerline of the carrier.

If the load offset cannot be changed consider:

- 1.) Higher capacity bearing style, i.e. S to P
- Larger Bore Cylinder
- 3.) Auxiliary Carrier
- 4.) Add External Guides

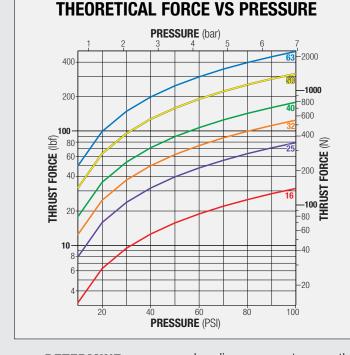

### DETERMINE **CUSHION & SHOCK CAPACITY**

Consult the Cushion and Shock Absorber Performance charts for the model selected (see page MXP\_22). The velocities listed on the cushion charts are final or impact velocities. If the final or impact velocity is not known, use of valve deceleration circuits or shock absorbers should be considered.

### **CUSHIONS**

Find the intersection of the final velocity and load mass. If the intersection is below the diagonal lines, the internal cushions on the actuator may be used.

bending moments on the carrier. The magnitude of these inertia moments can be larger than the applied Careful attention to how the load is decelerated at the end of stroke is required for extended actuator performance and application safety.

Evaluate the dynamic inertia moment data:

- 1.) The length of deceleration distance
- 2.) The load attached to the carrier
- 3.) The distance of the load mass center of gravity from the carrier, and
- 4.) The final velocity of the carrier.

If dynamic inertia moments

### ADJUSTMENT PROCEDURES

### **CUSHION NEEDLE ADJUSTMENT**

Adjust the cushion needle in the cylinder heads carefully to




obtain proper deceleration for your particular application. Proper cushion needle adjustment is achieved when the carrier reaches the end of travel at a velocity approaching

zero. If the carrier reaches the end of stroke at velocity, then the cushion needs to be increased by turning the cushion needle screw clockwise. If the carrier stalls or bounces (quickly oscillating directions) before it reaches the end of stroke, then the cushion needs to be decreased by turning the cushion needle screw counterclockwise. Improper cushion adjustment may cause premature failure of the actuator. Call Tolomatic with any questions.

### **S** SOLID BEARING CARRIER ADJUSTMENT

The S solid bearing carrier will provide for maximum life when properly adjusted. The carrier design contains both tension and lock screws. The tension screws control the amount of pressure placed on the carrier bearings. The lock screws lock the tension screws in place and provide fine adjustment of the carrier bearings. The number of tension and lock screws will vary depending on the bore size of the actuator.

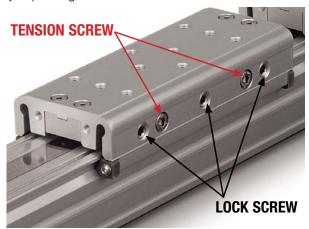

- 1. Fully loosen all tension and lock screws. They do not need to be removed, just fully loosened.
- 2. Tighten tension screws on both sides of carrier roughly 1/8 to 1/4 turn clockwise past where the screw starts to feel snug. The carrier should be very difficult or impossible to move by hand.
- 3. Next, adjust the lock screws on both sides of the carrier roughly 1/8 to 1/4 turn clockwise past where the screw starts to engage.
- 4. Ideal carrier tension is achieved when the carrier feels snug in relation to the tube. No rocking motion should be present. The carrier should be loose enough to be moved by hand over the entire length of the actuator. If after this process the carrier has become too loose, equally adjust all of the lock screws with a slight 1/32 turn counterclockwise. A carrier that is adjusted too tight will increase the breakaway pressure required for motion; in extreme cases no

During the service life, this process may need to be repeated. Keeping the carrier properly adjusted will prolong the life of the S solid bearing system.

motion will occur when air is applied.

### **MXP16**




NOTE: MXP16S requires a different carrier adjustment procedure, see below.

Tools Required:

Inch Models: 1/16 inch and 2.5mm Hex Wrench (Kev) Metric Models: 2 and 2.5 mm Hex Wrench (Key)

- 1. Loosen endplate screws on both ends of the carrier.
- 2. Fully loosen all tension and lock screws. They do not need to be removed, just fully loosened.

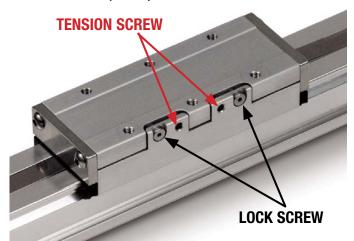

3. Tighten tension screws by turning them clockwise until the carrier is just tight enough so that no side-to-side rocking motion is present and it can easily be moved by hand over the entire stroke length with no hesitation. Very little torque on the screws is required to obtain this condition.

Note: The Tension Screws are the small set screw style fastener. The Lock Screws are the larger, low head, hex drive screws.

4. Tighten lock screws by turning them clockwise until tight. The carrier should feel snug in relation to the tube, with no side-to-side rocking motion present. If the carrier becomes too loose, loosen the lock screws, tighten the tension

> screws and then retighten the lock screws.

Allen wrench sizes for carrier adjustment, Solid bearing actuators Tancian Scrow Lock Scrow


	ICHOIDI	ISCIEW	LUCK .	OCI CW
	in	mm	in	mm
16	1/16	2	1/16	2
25	5/32	4	1/8	3
32	5/32	4	3/32	2
40	5/32	4	1/8	3
50	3/16	4	3/32	2.5
63	1/4	5	3/16	5

5. Once ideal carrier tension is achieved, fully tighten end plate screws on both ends of the carrier.

### REPAIR KITS

Repair kit includes: dust band, seal band, end caps, internal soft seals (piston seals, cushion seals, wipers), [Also for **S** style: bearings and bearing caps]

The part number for a repair kit begins with RK followed by model, bore size, bearing type, and stroke length (SK) = inch/US Standard, SM) = metric) (NOTE: If unit has an auxiliary carrier also include DW and distance between carrier centers)




### SWITCHES

### TO ORDER SERVICE PARTS SWITCHES:

Switches for MXP include retained mounting hardware and are the same for all bore sizes and bearing styles

Code	Lead	Normally	Sensor Type	
RY	5m (197 in)	Open	Reed	
RK	Quick-disconnect	Ореп	neeu	
NY	5m (197 in)	01	Deed	
NK	Quick-disconnect	Closed	Reed	
TY	5m (197 in)	Opon	Solid State PNP	
TK	Quick-disconnect	Open	John State I M	
KY	5m (197 in)	Onan	Colid Ctoto NIDN	
KK	Quick-disconnect	Open	Solid State NPN	
PY	5m (197 in)	Closed	Colid Ctota DND	
PK	Quick-disconnect	Ciosea	Solid State PNP	
HY	5m (197 in)	Closed	Colid Ctoto NDN	
HK	Quick-disconnect	Closed	Solid State NPN	



\*will include mating female QD cable if required

8

SHOCK			16		25			32		
ABSORBER KITS		N Internal	S Solid	P Profiled Rail	N Internal	S Solid	P Profiled Rail	N Internal	S Solid	P Profiled Rail
Fixed Shock Absorber Kit - Light Duty (2	Inch	8116-9510	8116-9511	8116-9512	8125-9510	8125-9511	8125-9512	8132-9510	8132-9511	8132-9512
shock absorbers, all required hardware)	Metric	8116-9010	8116-9011	8116-9012	8125-9010	8125-9011	8125-9012	8132-9010	8132-9011	8132-9012
Fixed Shock Absorber Kit - Heavy Duty	Inch	8116-9525	8116-9526	8116-9527	8125-9525	8125-9526	8125-9527	8132-9525	8132-9526	8132-9527
(2 shock absorbers, all required hardware)	Metric	8116-9025	8116-9026	8116-9027	8125-9025	8125-9026	8125-9027	8132-9025	8132-9026	8132-9027
*Adjustable Shock Absorber Kit - Light	Inch	8116-9515	8116-9016	8116-9517	8125-9515	8125-9016	8125-9517	8132-9515	8132-9016	8132-9517
<b>Duty</b> (2 shock absorbers, all required hardware)	Metric	8116-9015	8116-9016	8125-9017	8125-9015	8125-9016	8125-9017	8132-9015	8132-9016	8132-9017
*Adjustable Shock Absorber Kit - Heavy	Inch	8116-9530	8116-9031	8116-9032	8125-9530	8125-9031	8125-9532	8132-9530	8132-9031	8132-9532
<b>Duty</b> (2 shock absorbers, all required hardware)	Metric	8116-9030	8116-9031	8116-9032	8125-9030	8125-9031	8125-9032	8132-9030	8132-9031	8132-9032

SHOCK PARTS			16			25		32		
SHUCK PANTS		N Internal	S Solid	P Profiled Rail	N Internal	S Solid	P Profiled Rail	N Internal	S Solid	P Profiled Rail
Fixed Shock Absorber	Inch	8116-9520	8116-9520	8116-9522	8125-9520	8125-9520	8125-9522	8132-9520	8132-9520	8132-9522
Mounting Hardware (1 shock mount)	Metric	8116-9020	8116-9020	8116-9022	8125-9020	8125-9020	8125-9022	8132-9020	8132-9020	8132-9022
*Adj. Shock Absorber Mounting Hardware (1 shock mount)		8116-9023	8116-9023	8116-9024	8125-9023	8125-9023	8125-9024	8132-9023	8132-9023	8132-9024
Shock Stop Kit	Inch	8116-9521	NA	8116-9034	8125-9521	8125-9013	8125-9534	8132-9521	4912-1063	8132-9534
(Hardware needed for shock to strike carrier)	Metric	8116-9021	NA	8116-9034	8125-9021	8125-9013	8125-9034	8132-9021	4912-1063	8132-9034
Shock Absorber - Heavy Duty (1 shock absorber)		7906-1066	7906-1066	7906-1066	4910-1338	4910-1338	4910-1338	4912-1068	4912-1068	4912-1068
Shock Absorber - Light Duty (1 shock absorber)		7906-1065	7906-1065	7906-1065	4910-1337	4910-1337	4910-1337	4912-1067	4912-1067	4912-1067

\*NOTE: 🔳 Internal bearing: Adjustable shock absorbers will decrease actuator stroke, see 🛦 Stroke Adder note on page MXP\_29 for more information.

Solid bearing: Adjustable shock absorbers will decrease actuator stroke, see 🛦 Stroke Adder note on page MXP\_34 for more information.

Profiled rail: Adjustable shock absorbers will decrease actuator stroke, see A Stroke Adder note on page MXP\_39 for more information.

32

**S** Solid

8132-9519

8132-9019

8132-9018

8132-9536

8132-9036

Profiled Rail

8132-9519

8132-9019

8132-9018

NA

NA

## SERVICE PARTS MXP40, MXP50, MXP63

MOUNTING OPTIONS			40		50			63		
		N Internal	S Solid	P Profiled Rail	N Internal	S Solid	P Profiled Rail	N Internal	S Solid	P Profiled Rail
Foot Mount	Inch	8140-9519	8140-9519	8140-9519	8150-9519	8150-9519	8150-9519	8163-9519	8163-9519	8163-9519
(1 bracket, 2 bolts)	Metric	8140-9019	8140-9019	8140-9019	8150-9019	8150-9019	8150-9019	8163-9019	8163-9019	8163-9019
Tube Clamp (2 clamps)		8140-9018	8140-9018	8140-9018	8140-9018	8140-9018	8140-9018	8163-9018	8163-9018	8163-9018
Floating Mount	Inch	8140-9535	8140-9536	NA	8150-9535	8150-9536	NA	8163-9535	8163-9536	NA
(brackets, pin, mounting fasteners)	Metric	8140-9035	8140-9036	NA	8150-9035	8150-9036	NA	8163-9035	8163-9036	NA

SHOCK			40			50		63		
ABSORBER KITS		N Internal	S Solid	P Profiled Rail	N Internal	S Solid	Profiled Rail	N Internal	S Solid	Profiled Rail
Fixed Shock Absorber Kit - Light Duty (2 shock absorbers, all required hardware)	Inch	8140-9510	8140-9511	8140-9512	8150-9510	8150-9511	8150-9512	8163-9510	8163-9511	8163-9512
	Metric	8140-9010	8140-9011	8140-9012	8150-9010	8150-9011	8150-9012	8163-9010	8163-9011	8163-9012
Fixed Shock Absorber Kit - Heavy Duty (2 shock absorbers, all required hardware)	Inch	8140-9525	8140-9526	8140-9527	8150-9525	8150-9526	8150-9527	8163-9525	8163-9526	8163-9527
	Metric	8140-9025	8140-9026	8140-9027	8150-9025	8150-9026	8150-9027	8163-9025	8163-9026	8163-9027
*Adjustable Shock Absorber Kit	Inch	8140-9515	8140-9016	8140-9517	8150-9515	8150-9016	8150-9517	8163-9515	8163-9016	8163-9517
- <b>Light Duty</b> (2 shock absorbers, all required hardware)	Metric	8140-9015	8140-9016	8140-9017	8150-9015	8150-9016	8150-9017	8163-9015	8163-9016	8163-9017
*Adjustable Shock Absorber Kit - Heavy Duty (2 shock absorbers, all required hardware)	Inch	8140-9530	8140-9031	8140-9532	8150-9530	8150-9031	8150-9532	8163-9530	8163-9031	8163-9532
	Metric	8140-9030	8140-9031	8140-9032	8150-9030	8150-9031	8150-9032	8163-9030	8163-9031	8163-9032

SHOCK PARTS			40			50			63		
		N Internal	S Solid	P Profiled Rail	N Internal	S Solid	P Profiled Rail	N Internal	S Solid	P Profiled Rail	
Fixed Shock Absorber	Inch	8140-9520	8140-9520	8140-9520	8150-9520	8150-9520	8150-9522	8163-9520	8163-9520	8163-9520	
Mounting Hardware (1 shock mount)	Metric	8140-9020	8140-9020	8140-9020	8150-9020	8150-9020	8150-9022	8163-9020	8163-9020	8163-9020	
*Adj. Shock Absorber Mounting Hardware (1 shock mount)		8140-9023	8140-9023	8140-9024	8150-9023	8150-9023	8163-9024	8163-9023	8163-9023	8163-9024	
Shock Stop Kit	Inch	8140-9521	4912-1063	8140-9534	8150-9521	4415-1003	8150-9034	8163-9521	4915-1003	8150-9034	
(Hardware needed for shock to strike carrier)	Metric	8140-9021	4912-1063	8140-9034	8150-9021	4415-1003	8150-9034	8163-9021	4915-1003	8150-9034	
Shock Absorber - Heavy Duty (1 shock absorber)		4912-1068	4912-1068	4912-1068	4920-1069	4920-1069	4920-1069	4920-1069	4920-1069	4920-1069	
Shock Absorber - Light Duty (1 shock absorber)		4912-1067	4912-1067	4912-1067	4920-1068	4920-1068	4920-1068	4920-1068	4920-1068	4920 -1068	

NOTE: 🔃 Internal bearing: Adjustable shock absorbers will decrease actuator stroke, see 🛦 Stroke Adder note on page MXP\_29 for more information.

Solid bearing: Adjustable shock absorbers will decrease actuator stroke, see A Stroke Adder note on page MXP\_34 for more information.

Profiled rail: Adjustable shock absorbers will decrease actuator stroke, see 🛦 Stroke Adder note on page MXP\_39 for more information.

Tolomatic EXCELLENCE IN MOTION

A

MXP

BC2


BC3

**B**64

ဟု

5

ENGR

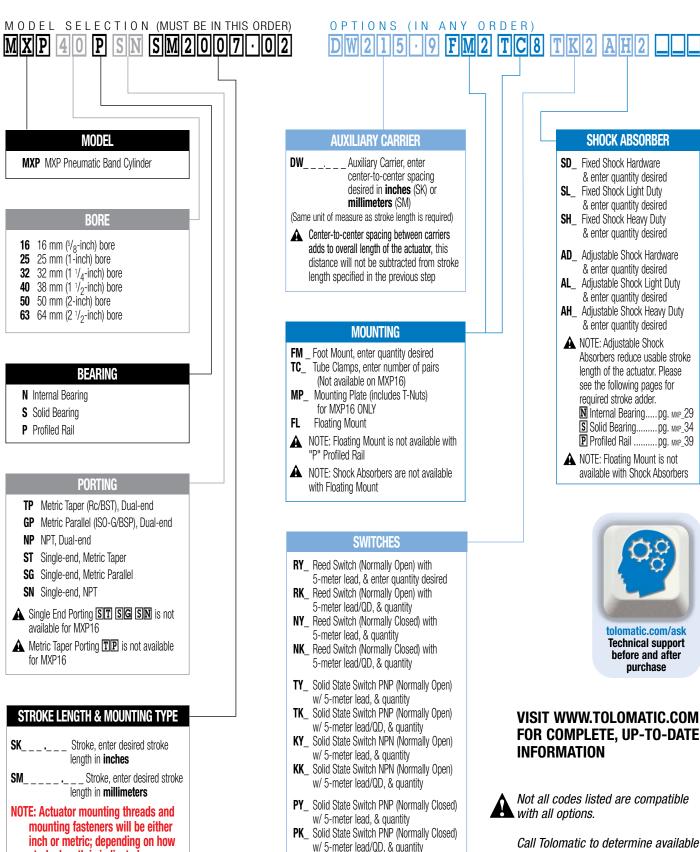

Call Tolomatic to determine available options and accessories based on your application requirements.

HY\_ Solid State Switch NPN (Normally Closed)

w/ 5-meter lead, & quantity **HK**\_ Solid State Switch NPN (Normally Closed)

w/ 5-meter lead/QD, & quantity

stroke length is indicated

SK=inch mounting

SM= metric mounting

## The Tolomatic Difference Expect More From the Industry Leader:



Unique linear actuator solutions with Endurance Technology<sup>SM</sup> to solve your challenging application requirements.



The fastest delivery of catalog products... Built-to-order with configurable stroke lengths and flexible mounting options.

## ACTUATOR SIZING

Online sizing that is easy to use, accurate and always up-to-date. Find a Tolomatic electric actuator to meet your requirements.

## YOUR MOTOR HERE


Match your motor with compatible mounting plates that ship with any Tolomatic electric actuator.



Easy to access CAD files available in the most popular formats to place directly into your assembly.



Extensive motion control knowledge:
Expect prompt, courteous replies to any application and product questions from Tolomatic's industry experts.

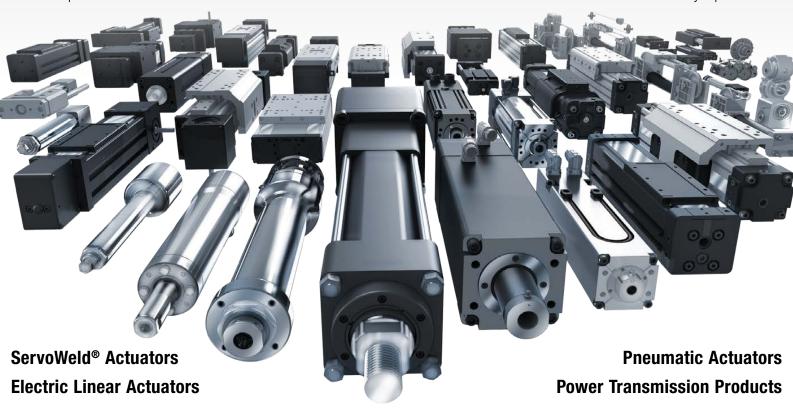



COMPANY WITH
QUALITY SYSTEM
CERTIFIED BY DNV GL
= ISO 9001 =
Certified site: Hamel, MN

## USA - Headquarters

Tolomatic Inc.

3800 County Road 116 Hamel, MN 55340, USA Phone: (763) 478-8000 Toll-Free: 1-800-328-2174 sales@tolomatic.com www.tolomatic.com

### **MEXICO**

Centro de Servicio

Parque Tecnológico Innovación Int. 23, Lateral Estatal 431, Santiago de Querétaro, El Marqués, México, C.P. 76246 Phone: +1 (763) 478-8000 help@tolomatic.com

### **EUROPE**

**Tolomatic Europe GmbH** 

Elisabethenstr. 20 65428 Rüsselsheim Germany

Phone: +49 6142 17604-0 help@tolomatic.eu

### **CHINA**

Tolomatic Automation Products (Suzhou) Co. Ltd.

No. 60 Chuangye Street, Building 2 Huqiu District, SND Suzhou Jiangsu 215011 - P.R. China Phone: +86 (512) 6750-8506 TolomaticChina@tolomatic.com

All brand and product names are trademarks or registered trademarks of their respective owners. Information in this document is believed accurate at time of printing. However, Tolomatic assumes no responsibility for its use or for any errors

that may appear in this document. Tolomatic reserves the right to change the design or operation of the equipment described herein and any associated motion products without notice. Information in this document is subject to change without notice.

Visit www.tolomatic.com for the most up-to-date technical information

© 2022 Tolomatic, Inc. 202205180914 LITERATURE NUMBER: **8100-4000\_08**