


MXP25N Internal Bearing 25mm (1 inch) Bore

Models: MXP25NTP MXP25NGP MXP25NNP
 MXP25NST MXP25NSG MXP25NSN
 Both Metric and Inch models

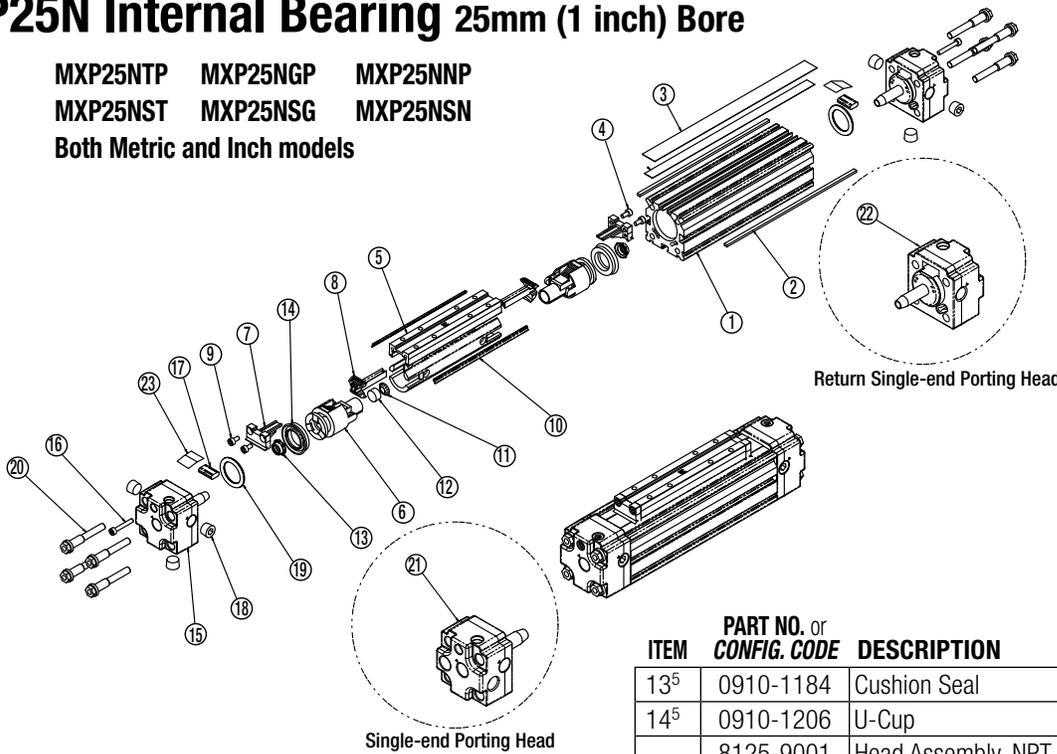

ITEM	PART NO. or CONFIG. CODE	DESCRIPTION	QTY.
1 ¹	RTBMXP25N	Replacement Tube (8125-1010) Specify Stroke	A/R
2 ²	NMBMXP25N	Replacement Magnet Band (8125-1019) Specify Stroke	2 A/R
3 ³	NDBMXP25N	Replacement Dust Band (8125-1018) Specify Stroke	A/R
4 ^{4,5}	NSBMXP25N	Replacement Seal Band (8125-1017) Specify Stroke	A/R
5	8125-1012	Piston Bracket (metric)	1
	8125-1512	Piston Bracket (inch)	
6	8125-1005	Piston	2
7 ⁵	8125-1006	End Cap	2
8 ⁵	8125-1007	Band Ramp	2
9	0601-1038	Socket Head Cap Screw	4
10 ⁵	8125-1059	Wiper	2
11	8125-1072	Lock Washer	1
12	2100-1050	Magnet	1

ITEM	PART NO. or CONFIG. CODE	DESCRIPTION	QTY.
13 ⁵	0910-1184	Cushion Seal	2
14 ⁵	0910-1206	U-Cup	2
15	8125-9001	Head Assembly, NPT	2
	8125-9006	Head Assembly, BSPT Metric Taper	
	8125-9007	Head Assembly, ISO Metric Parallel	
16 ⁶	2212-1111	Socket Head Cap Screw	2
17 ⁶	8125-1039	Band Clamp	2
18 ⁶	1014-1065	Pipe Fitting Plug, 1/8-27 NPT	6
	4910-1002	Pipe Fitting Plug, 1/8-28	
	5910-1006	Pipe Fitting Plug, G 1/8	
19 ^{5,6}	0910-1160	O-ring	2
20	4910-1344	Head Screw (metric)	8
	0910-1344	Head Screw (inch)	
21 ⁷	8125-9002	Head Assembly, NPT, Single-end Porting	1
	8125-9008	Head Assembly, BSPT Metric Taper, Single-end Porting	
	8125-9009	Head Assembly, ISO Metric Parallel, Single-end Porting	
22 ⁷	8125-9003	Return Head Assembly, Single-end Porting	1
23	8125-1038	Band Tab	2

Ordering method:

¹ Replacement Tube
 RTB MXP25N **EXAMPLE:** RTB MXP25N SK21.25 DW7

² Replacement Magnet Band
 For long stroke lengths the magnet band is shipped in multiple pieces
 NMB MXP25N **EXAMPLE:** NMB MXP25N SK21.25 DW7

Magnet Band Model & Size Bearing Stroke Length Aux. Carrier

Ordering method:

³ Replacement Dust Band
 NDB MXP25N **EXAMPLE:** NDB MXP25N SK21.25 DW7

⁴ Replacement Seal Band
 NSB MXP25N **EXAMPLE:** NSB MXP25N SK21.25 DW7

Seal band Model & Size Bearing Stroke Length Aux. Carrier

Auxiliary Carrier Option Note: If replacing a Tube (1.), Magnet Band (2.), Dust Band (3.), or Seal Band (4.) on an actuator that has an Auxiliary Carrier, be sure to add "DC ___" to the end of the configuration string when ordering. "DW" indicates the need for additional length and "___" indicates the measurement of space between carriers (in inches [SK] or millimeters [SM] as indicated earlier in the configuration string).

⁵ Parts included in Repair Kits RKMXP25NSK (inch) & RKMXP25NSM (metric).

⁶ Parts included in Head Assemblies (15).

⁷ Part exclusive to single-end porting option.

CYLINDER DISASSEMBLY INSTRUCTIONS

Begin with a clean work area. Make sure all replacement parts are available and have no visual damage or defects. The following tools and materials are recommended for proper disassembly and assembly. (Exact wrench sizes will vary depending on cylinder size.)

- Allen wrench set (U.S. standard. and metric)
- Small Straight edge screwdriver
- Socket wrench & socket set
- Needle nose pliers
- RheoGel TEK664 grease
- Tin snips

For best actuator performance it is recommended that the following instructions be read and followed carefully.

1. REMOVE BAND CYLINDER FROM MACHINERY

Remove all mounting hardware and air connections, if present, from the Cylinder Heads (15) and/or Piston Bracket (5).

2. LOOSEN BANDS

Loosen Screw (16) from Cylinder Head (15) approx. 4 to 5 turns, but do not remove the Screw. Tap the Screw into the Head to disengage the Band Clamp (17). Repeat the process for the other Head.

3. REMOVE HEADS

Remove the four Head Screws (20) to free each Cylinder Head (15). Remove each Head by rocking it up and down until the Head is free from the Cylinder Tube. DO NOT TWIST! Remove the small Band Tab (23) mounted over the top of the Dust Band (3). Remove the O-Ring (19) from both Heads with a small screwdriver.

4. REMOVE DUST BAND

Remove End Caps (7) from both ends of the Piston Bracket (5) by removing Screws (9). To remove the Dust Band (3), lift one end and pull the Band through the Piston Bracket. The Band is magnetically retained so some resistance will be present when removing.

5. REMOVE SEAL BAND

CAUTION: Sealing Band edges are sharp. Grasp the top and bottom of the Band when removing, not the edges.

Slide Piston Bracket (5) out of the Tube, then remove the Sealing Band (4). Keep the Sealing Band available to assist in the reassembly of the new Sealing Band. A 6-inch piece of Band is also included in the repair kit for use during reassembly.

6. DISASSEMBLE PISTON BRACKET

Remove Wipers (10) from the Piston Bracket (5). With a small straight edge screwdriver, remove the U-Cups (14) from both Pistons (6). Remove the Cushion Seals (13) from the Piston. Remove the Pistons (6) by inserting the screwdriver under the Piston side tabs until the side retaining tabs are disengaged from the Piston Bracket (5). With a small screwdriver, remove the Band Ramps (8) by disengaging the side retaining tabs from the Piston Bracket. Keep the Piston Bracket and Pistons separated for reassembly.


CYLINDER ASSEMBLY INSTRUCTIONS

1. CLEAN AND LUBRICATE

Thoroughly clean all components, particularly the Tube Bore, Tube Slot and Bands. Thoroughly lubricate the bore of the Tube with a thin, uniform layer of RheoGel TEK664 grease.

2. ASSEMBLY OF PISTON BRACKET


With the Piston Bracket (5) in hand, install the Band Ramps (8) so the smaller ends are on the bottom. Install the Pistons (6) with the ramp facing up. Slide the Piston onto the Piston Bracket. It should snap easily into place. Install new lubri-

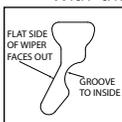

cated U-Cups (14) (seal lips facing out), and Cushion Seals (13) (small end facing out). Slide new Wipers (10) into the groove on the Piston Bracket (5), flat side of Wiper faces out, Wiper groove on inside (see illustration). Trim to edge of Piston Bracket (5) and flare Wiper (10) edges outward.

3. INSTALL INNER SEALING BAND

CAUTION: Metal Edges of Sealing Band edges are sharp. Exercise caution to avoid injury to yourself when installing. Handle Sealing Band with care. Do not damage edges while handling.

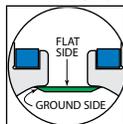

Insert Sealing Band (4) into Cylinder Tube (1) by laying the Band out along the length of the actuator and passing it sideways through slot in Tube. With flat side facing up (ground side facing down), position the Band so a Piston Bracket's length of Band extends from the Tube at one end.

4. INSTALL PISTON ASSEMBLY

Place generous amounts of grease around bore of Tube (1) on both ends and fill indentations on both sides of Piston Bracket with grease. Using the 6-inch length of Seal Band included with repair kit, or a short length of the old Seal Band, slightly kink the Band upwards, one inch (25mm) from the end. Insert into slot between the Band Ramp (8) and Piston (6) on the Piston Bracket, and stop against opposite side of the Piston. Feed the extended Sealing Band through the opposite end of the Piston Bracket (5) and up the short length of inserted Band. Once the Sealing Band is through the Piston Bracket, remove the short length of Band material and discard.

Grasp the Piston Bracket while holding the Wipers in place with your fingers. Flare the Wiper edges out while inserting the Piston Bracket partway into the Tube. Do not force the Piston Bracket. Place a finger over the opposite end of the Piston Bracket to keep the Wipers in place, while pushing the remainder of Piston Bracket into the Tube. If the Piston Assembly experiences resistance, use a small screw driver to press in on the ends of the Band Ramps (8) where it contacts the Tube (1). With the Piston Bracket in place, slide the length of the greased Tube until the end of the Piston just extends out the Tube. Wipe off the excess grease from the Piston end.

NOTE: If Tube and Piston Assembly were greased properly, excess grease should be present as the Piston exits end of Tube. If this is not the case, more grease will need to be added.

5. INSTALL ONE HEAD

CAUTION: Twisting the Head during installation may cut the O-Rings resulting in excessive leakage during operation.

Install new lubricated O-Rings (19) onto each Head (15). Position the Seal Band (4) leaving .490" (12.4 mm) of Band protruding from the end of the Tube. Install Head into Tube holding Screw (16) in place. Position the Sealing Band on the bottom side of the Band Clamp (17). Use a slight up and down rocking motion (not side-to-side or twisting) to insert the first Head into Tube. The Head should be flush with the end of the Tube after installation.

Apply RheoGel TEK664 to threads of Head Screws (20) and install into Head. Torque Screws to 70 – 80 in-lbs (8 - 9 N-m).

6. INSTALL DUST BAND

Slide Dust Band (3) through the upper slot of Piston Bracket (5) and lay on top of the Cylinder Tube slot. Position the Dust Band on top of the Band Clamp (17). Insert the Band Tab (23) on top of the Dust Band. Tighten Screw (16). When completed pull the other end of the Dust Band to make sure it is secured. Repeat the process if necessary. Install End Caps (7) with Screws (9) onto the Piston Bracket.

7. INSTALL OTHER HEAD

Position the Dust Band (3) so the end of the Sealing Band (4) is visible. With a tin snips, trim the Sealing Band (4) leaving .490" (12.4 mm) of Band protruding from the end of the Tube. Reposition the Dust Band and trim to the same length. Repeat step 5 to install the other Head (15). Position the Dust Band on top of the Band Clamp (17) and the Seal Band on the bottom side. Insert the Band Tab (23) on top of the Dust Band. Tighten Screw (16).



8. CHECK ASSEMBLY

Manually push the Piston Bracket (5) back and forth along the full stroke to make certain that the cylinder is properly assembled before reconnecting to the pneumatic supply. The Piston Bracket should move consistently with minimal friction along the stroke.

9. REMOUNT THE CYLINDER ONTO THE MACHINE

⚠ Be certain any flow controls are in place and adjusted prior to applying compressed air to the cylinder.

Options - List of Parts

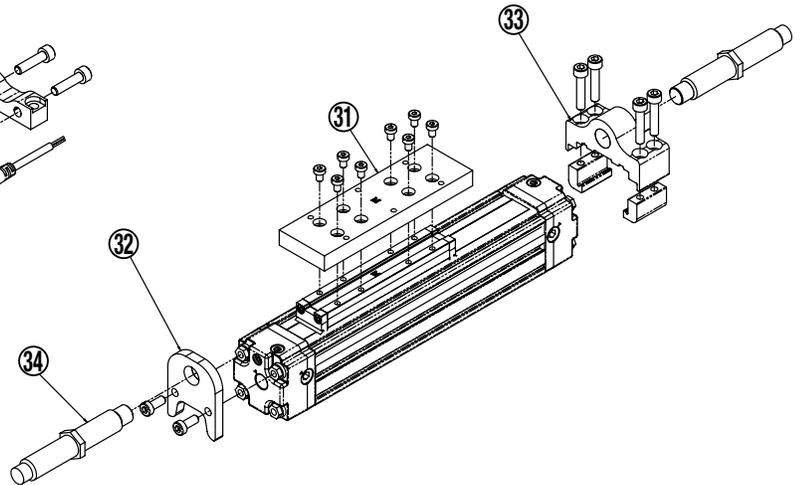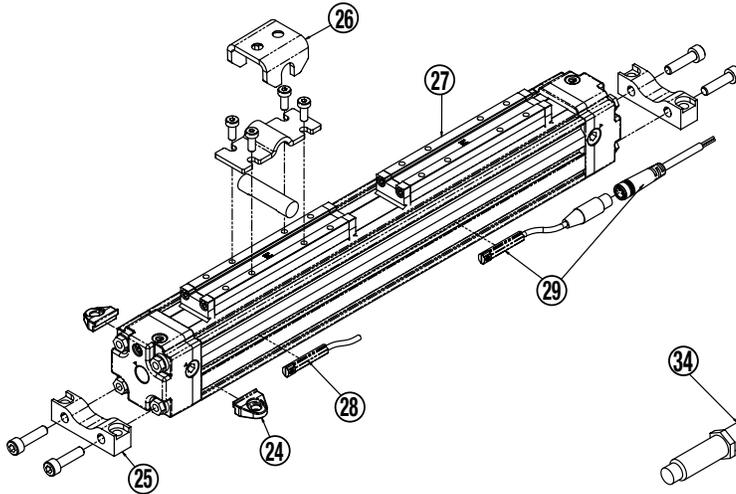

ITEM	PART NO. or CONFIG. CODE	DESCRIPTION
MOUNTING KITS		
24 ¹	8125-9018	Tube Clamp Mounting Kit
	8125-1050	Tube Clamp
25 ²	8125-9019	Foot Mount Kit (metric)
	8125-9519	Foot Mount Kit (inch)
	8125-1055	Foot Mount
	2212-1098	Screw (metric)
	0910-1314	Screw (inch)
26 ³	8125-9035	Floating Mount Kit (metric)
	8125-9535	Floating Mount Kit (inch)
	8125-1067	Floating Mount Lower Bracket Strap
	8125-1066	Floating Mount Bracket
	8125-1065	Floating Mount Pin
	8125-1070	Screw (metric)
	8125-1570	Screw (inch)
DUAL CARRIER		
27	8125-9028	Dual Carrier Piston Bracket Assy (metric)
	8125-9528	Dual Carrier Piston Bracket Assy (inch)
SWITCHES		
28	Switches without Quick-Disconnect Couplers	
	SWMXP25NRY	Reed Switch, SPST Normally Open
	SWMXP25NNY	Reed Switch, SPST Normally Closed
	SWMXP25NTY	Solid State Switch, PNP (sourcing) Normally Open
	SWMXP25NKY	Solid State Switch, NPN (sinking) Normally Open
	SWMXP25NPY	Solid State Switch, PNP (sourcing) Normally Closed
	SWMXP25NHY	Solid State Switch, NPN (sinking) Normally Closed

ITEM	PART NO. or CONFIG. CODE	DESCRIPTION
29	Switches with Quick-Disconnect Couplers	
	SWMXP25NRK	Reed Switch, SPST Normally Open
	SWMXP25NNK	Reed Switch, SPST Normally Closed
	SWMXP25NTK	Solid State Switch, PNP (sourcing) Normally Open
	SWMXP25NKK	Solid State Switch, NPN (sinking) Normally Open
	SWMXP25NPK	Solid State Switch, PNP (sourcing) Normally Closed
	SWMXP25NHK	Solid State Switch, NPN (sinking) Normally Closed
SHOCK ABSORBERS		
31 ⁴	8125-9021	Shock Mounting Plate Kit (metric)
	8125-9521	Shock Mounting Plate Kit (inch)
	8125-1062	Shock Mounting Plate (metric)
	8125-1562	Shock Mounting Plate (inch)
	8125-1075	Screw (metric)
	8125-1574	Screw (inch)
32 ⁵	8125-9020	Fixed Shock Mounting Kit (metric)
	8125-9520	Fixed Shock Mounting Kit (inch)
	8125-1060	Shock Bracket
	8125-1071	Screw (metric)
	0915-1016	Screw (inch)
33 ⁶	8125-9023	Adjustable Shock Mounting Kit
	8125-1080	Upper Shock Bracket
	8125-1082	Lower Shock Bracket Clamp
	2212-1099	Screw
34	4910-1337	Light Duty Shock Absorber
	4910-1338	Heavy Duty Shock Absorber

¹ Tube Clamp Kit contains 2 tube clamps.

² Foot Mount Kit contains 1 foot mount and 2 fasteners.

³ Floating Mount Kit contains 1 floating mount, 1 lower strap, 1 pin and 4 fasteners.

⁴ Shock Mounting Plate Kit contains 1 mounting plate and 8 fasteners.

⁵ Fixed Shock Mounting Kit contains 1 shock bracket and 2 fasteners.

⁶ Adjustable Shock Mounting Kit contains 1 upper bracket, 2 lower bracket clamps and 4 fasteners.

LUBRICATION AND MAINTENANCE

All Tolomatic MX Band Cylinders are prelubricated at the factory. To ensure maximum cylinder life, the following guidelines should be followed.

1. Filtration

We recommend the use of dry, filtered air in our products. "Filtered air" means a level of 10 Micron or less. "Dry" means air should be free of appreciable amounts of moisture. Regular maintenance of installed filters will generally keep excess moisture in check.

2. External Lubricators (optional)

The factory prelubrication of Tolomatic Band Cylinders will provide optimal performance without the use of external lubrication. However, external lubricators can further extend service life of pneumatic actuators if the supply is kept constant.

Oil lubricators, (mist or drop) should supply a minimum of 1 drop per 20 standard cubic feet per minute to the cylinder. As a rule of thumb, double that rate if water in the system is suspected. Demanding conditions may require more lubricant.

If lubricators are used, we recommend a non-detergent, 20cP @ 140°F 10-weight lubricant. Optimum conditions for standard cylinder operation is +32° to +150°F (+0° to 65.5°C).

NOTE: Use of external lubricators may wash away the factory installed lubrication. External lubricants must be maintained in a constant supply or the results will be a dry actuator prone to premature wear.


3. Sanitary Environments

Oil mist lubricators must dispense "Food Grade" lubricants to the air supply. Use fluids with ORAL LD50 toxicity ratings of 35 or higher such as Multitherm® PG-1 or equivalent. Demanding conditions can require a review of the application.

4. Cushion Adjustment

Adjust the Cushion Needles in the Cylinder Heads carefully to obtain optimum deceleration for your particular application. If there are questions on proper adjustment, please consult Tolomatic.


SWITCH WIRING DIAGRAMS AND LABEL COLOR CODING (CE and RoHS Compliant)

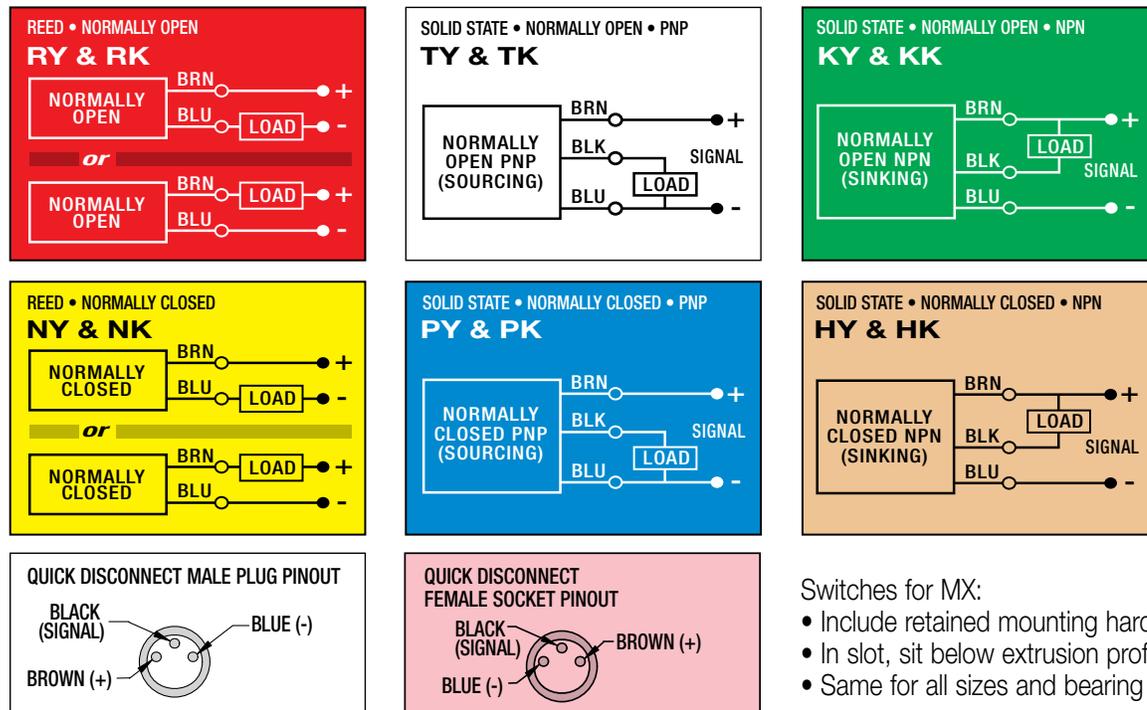

Switches for MX:


- Include retained mounting hardware
- In slot, sit below extrusion profile
- Same for all sizes and bearing styles

SWITCH INSTALLATION AND REPLACEMENT

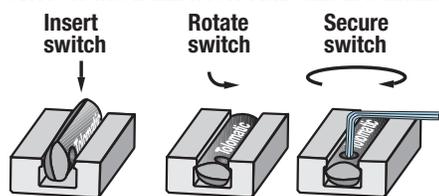

Place switch in side groove on tube at desired location with "Tolomatic" facing outward. While applying light pressure to the switch, rotate it such that the switch is halfway in the groove. Maintaining light pressure, rotate the switch in the opposite direction until the switch is fully inside the groove with "Tolomatic" visible. Re-position the switch to the exact location and lock the switch securely into place by tightening the screw on the switch.

SWITCH DETECTION POINT

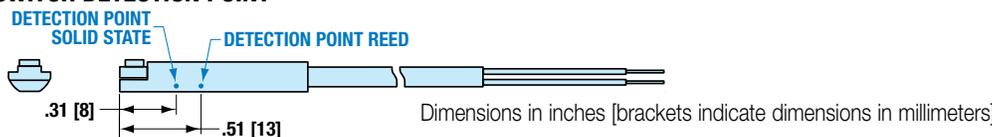

3800 County Road 116, Hamel, MN 55340 USA
 http://www.Tolomatic.com • Email: Help@Tolomatic.com
 Phone: (763) 478-8000 • Toll Free: 1-800-328-2174

COMPANY WITH
 QUALITY SYSTEM
 CERTIFIED BY DNV
 = ISO 9001 =

All brand and product names are trademarks or registered trademarks of their respective owners. Information in this document is believed accurate at time of printing. However, Tolomatic assumes no responsibility for its use or for any errors that may appear in this document. Tolomatic reserves the right to change the design or operation of the equipment described herein and any associated motion products without notice. Information in this document is subject to change without notice.